



primoSchwank & supraSchwank

HIGH EFFICIENCY COMBINED INTENSITY

Gas-Fired Luminous (High Intensity) Infrared Heaters

Certified to ANSI Z83.19 / CSA 2.35 latest edition.

INSTALLATION / OWNER'S MANUAL



WARNING Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death.

Read the installation and operating and maintenance instructions thoroughly before installing or servicing this equipment.

Not approved for use in any residential application.

SAFETY ALERT:



This heater must be installed and serviced only by a trained gas service technician. Failure to comply could result in personal injury, death, fire and/or property damage.

Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other gas fired appliance.



IF YOU SMELL GAS:

- Extinguish any open flame
- Do not attempt to light this or any other appliance
- Don't touch any electrical switch, or telephone
- Immediately leave the area and call your gas supplier from a neighbor's phone
- Follow any and all instruction from your gas supplier
- If your gas supplier is not available, call the fire department



FIELD CONVERTIBILITY:

This appliance is field convertible to LP gas. Use ONLY a kit available from manufacturer. See Page 14. Follow all local and national codes.

INSTALLER: PRESENT THIS MANUAL TO THE END USER.

Keep this manual in a secure place .

Record for future reference:

Model #: _____

Serial #: _____

(located on heater rating label)

GAS-FIRED



supra/primo Manual
IM091112
RD: APR 2019
RL: 14E

NOTICE:

This manual is current for this product. Occasional revision of the product Certification Standard may require changes to the product and/or this manual.

This publication, or parts thereof, may not be reproduced in any form, without prior written consent from The Manufacturer. Unauthorized use or distribution of this publication is strictly prohibited.

Schwank Group

Schwank and InfraSave brands

5285 Bradco Boulevard

Mississauga, Ontario, L4W 2A6

PO Box 988, 2 Schwank Way

Waynesboro, Georgia 30830

Customer & Technical Services

Phone: 877-446-3727

Fax: 866-361-0523

e-mail: csr@schwankgroup.com

www.schwankgroup.com

www.infrasave.com

primoSchwank supraSchwank

HIGH EFFICIENCY COMBINED INTENSITY GAS FIRED INFRA-RED HEATERS

TABLE OF CONTENTS

TOPICPAGE	TOPICPAGE
 <u>IMPORTANT INFORMATION - READ FIRST</u>			
APPLICATION	4	11. INSTALLATION	16
HEATER EXPANSION	5	DIMENSIONS & CAPACITIES	17
GAS CONNECTION	5, 14	SEISMIC & WIND SUSPENSION	18
VENTING	5, 13	12. LIGHTING INSTRUCTIONS	19
'SMOKE' & DISCOLORATION	5	13. SHUT DOWN INSTRUCTIONS	19
CLEARANCE TO COMBUSTIBLES	6	14. DISCOLORATION OF HEATER BODY	19
Clearances Figure & Table	7	WIRING DIAGRAMS	
STACKING HEIGHT SIGN	8	15. FENWAL CONTROL - 24V THERMOSTAT	20
1. GENERAL APPLICATION	9	16. FENWAL CONTROL - 120V THERMOSTAT	21
LABOR REQUIREMENTS	9	17. SERVICE GUIDE	22
2. INSTALLATION IN AIRCRAFT HANGARS	9	18. TROUBLESHOOTING GUIDE	23
3. INSTALLATION IN COMMERCIAL GARAGES	9	19. HIGH ALTITUDE INSTALLATION	26
4. INSTALLATIONS OTHER THAN SPACE HEATING	9	ORIFICE CHARTS	26
5. PRE-INSTALLATION SURVEY	10	20. SEQUENCE OF OPERATION	27
6. MOUNTING CLEARANCES	11	21. SPARK IGNITION CIRCUIT	28
SERVICE CLEARANCE	11	22. START- UP / COMMISSIONING SHEET	29
7. HEATER PLACEMENT GUIDELINES	12	23. OPTIONAL ACCESSORIES	30
8. VENTILATION	13	PRIMO SIDE SHIELD EXTENSIONS	33
9. GAS SUPPLY & PIPING	14	SUPRA SIDE SHIELD EXTENSIONS	34
GAS CONVERSION	14	24. EXPLODED VIEW & PARTS LIST	35
10. ELECTRICAL & THERMOSTAT	15	WARRANTY STATEMENT	BACK PAGE



IMPORTANT

Installer: Present this manual to the end user. Acquaint the end user with Important Information: Cover & pages 4 to 8.



END USER: In particular you must be aware of 'Clearances to Combustible' requirements and the limitations of stacking or placing material near the heaters.

Inform your safety personnel and staff of this information.



IMPORTANT

Installer: Present this manual to the end user. Acquaint the end user with Important Information: Cover & pages 4 to 8.



END USER: In particular you must be aware of 'Clearances to Combustible' requirements and the limitations of stacking or placing material near the heaters.

Make your safety personnel and staff aware of this information.



WARNING



Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read and understand this installation and operation manual thoroughly prior to assembly, installation, operation or service to this appliance.

This heater must be installed and serviced only by a trained gas service technician.



Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other gas fired appliance.

Failure to comply could result in personal injury, death, fire and/or property damage.



Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other gas fired appliance.

This appliance may have sharp edges and corners. Wear protective clothing such

California Proposition 65:



WARNING: This product can expose you to chemicals including carbon monoxide, which is known to the State of California to cause birth defects or other reproductive harm. For more information, go to www.P65Warnings.ca.gov

APPLICATION

This heater is certified to ANSI Z83.19 / CSA 2.35 latest edition.

A gas-fired high intensity luminous radiant heater may be installed for heating of commercial / industrial non-residential spaces. It is beyond the scope of these instructions to consider all conditions that may be encountered. Installation must conform with all local building codes or, in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1/NFPA 54 in the U.S.A. or the Natural Gas and Propane Installation Code, CSA B149.1 in Canada. The latest edition Electrical Code ANSI/NFPA N0 70 in the U.S.A. and PART 1 CSA C22.1 in Canada must also be observed.

Installation of a gas-fired radiant heater must conform to all heating installation design procedures including clearance to combustibles, connection to the gas and electrical supplies, and ventilation.



WARNING

This heater is not for installation in a Class 1 or Class 2 explosive environment, nor for any residential application. If installation of this equipment is in question, consult with local authorities having jurisdiction (Fire Marshall, labor department, insurance underwriter, or others).

Revisions to codes and/or standards, may require revision to equipment and installation procedures. In case of discrepancy, the latest codes, standards, and installation manual will take priority over prior releases.

IMPORTANT: DO NOT INSTALL THIS HEATER IN A STRUCTURE WITH NO INSULATION IN THE ROOF—CONDENSATION WILL OCCUR.



WARNING

Heater Expansion



It is a normal condition that during heat-up and cool-down a radiant heater will expand and contract. Allowances for heater expansion must be made in the gas connection and heater suspension. Improper installation, alteration, or adjustment can result in property damage, injury or death.



WARNING

Gas Connection



Improper installation, connection, or adjustment can result in property damage, toxic gases, asphyxiation, injury or death. Use an approved stainless steel flexible gas connector (field supplied) to connect to the gas supply to the heater in accordance with all local, state, provincial, and national codes (ANSI Z223.1/NFPA 54 in USA; B149.1 in Canada) and as indicated in this manual.



WARNING

Venting



Inadequate venting of a heater may result in asphyxiation, carbon monoxide poisoning, injury or death. This heater is indirectly vented from the space. Venting must be in accordance with all local, state, provincial, and national codes (ANSI Z223.1/NFPA 54 in USA; B149.1 in Canada) and as indicated in this manual. **Refer to Sections 11 & 12**



WARNING

'Smoke' & Discoloration Condition

During start-up, the heating of material coatings used in the production process of the heater may create a small amount of smoke during the initial period of operation. This condition is normal and temporary .

Ensure that there is sufficient ventilation to adequately clear any 'smoke' from the space.

Notify site management and safety personnel to ensure that alarm systems are not unduly activated.

Under certain conditions in some locations/environments, surface discoloration may occur on the heater body where the products of combustion discharge from the heater. **This discoloration is due the deposit of ambient air borne particulate or gases that have passed through combustion. The combustion of fuel gas in a clean environment will not cause any discoloration. The discoloration does not affect the operation of the heater nor the manufacturer's warranties.**



WARNING

Clearance to Combustibles

Location of flammable or explosive objects, liquids or vapors close to the heater may cause fire or explosion and result in property damage, injury or death. Do not use, store or locate flammable or explosive objects, liquids or vapors in proximity of the heater.



The clearance to combustible material represents the minimum distance that must be maintained between the outer heater surface and a nearby surface. The stated clearance to combustibles represents a surface temperature of 90F° (50C°) above room temperature.



It is the installer's responsibility to ensure that building materials with a low heat tolerance which may degrade at lower temperatures are protected to prevent degradation. Examples of low heat tolerance materials include vinyl siding, fabrics, some plastics, filmy materials, etc.

In locations used for the storage of combustible materials, signs must be posted to specify the maximum permissible stacking height to maintain the required clearances from the heater to the combustibles. For your convenience, a sign is supplied with this heater - see page 8 for details. Such signs must either be posted adjacent to the heater thermostats or in the absence of such thermostats in a conspicuous location.

In addition to stored or stationary material, consideration must also be given to moveable objects such as cranes, vehicles, and overhead doors, and structural objects such as electrical and gas lines, electrical fixtures, and sprinkler heads.

Heaters must be located an appropriate distance from sprinkler heads. This distance may be greater than the certified clearance to combustibles. Check the temperature rating of the sprinkler heads and locate heaters at a safe distance - in some instances the sprinkler heads may need to be replaced by higher temperature heads.

It is beyond the scope of these instructions to consider all conditions that may be encountered. Consult local authorities such as the Fire Marshall, insurance carrier, or safety authorities if you are uncertain as to the safety or applicability of the proposed installation.

Refer to Figure 1 and Table 1 NEXT PAGE for the certified clearances to combustibles for the appropriate model input/size.

MOUNTING CLEARANCE TO COMBUSTIBLES

NOTE:



A 'PEEL & STICK' SIGN IS SUPPLIED: USE AN INDELIBLE MARKER TO ENTER VALUES 'H', 'S', 'F', & 'B' ON .

POST THE SIGN ADJACENT TO THE HEATER THERMOSTAT OR IN A PROMINENT LOCATION. *See next page for details.*

FIGURE 1: MINIMUM DISTANCES TO COMBUSTIBLES - refer to Table 1 for values

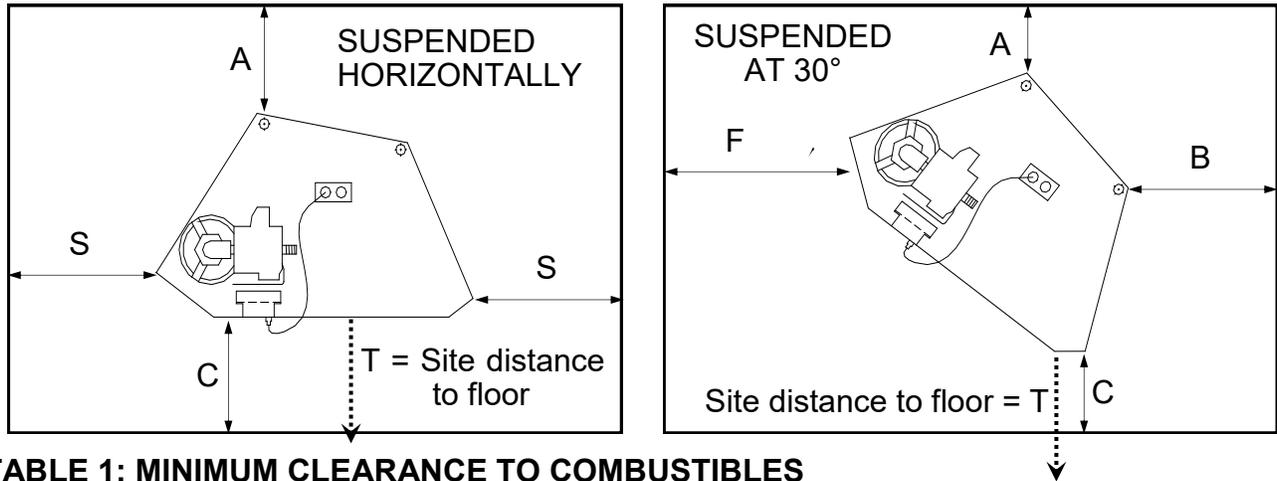


TABLE 1: MINIMUM CLEARANCE TO COMBUSTIBLES

SUSPENDED HORIZONTALLY: *Measured from outer surface of heater*

MODEL	BELOW 'C' Inches [cm]	SIDES 'S' Inches [cm]	TOP 'A' Inches [cm]	ENDS 'E' Inches [cm]
primoSchwank 10	90" [229]	30" [76]	18" [46]	48" [122]
primoSchwank 15	96" [244]	30" [76]	18" [46]	48" [122]
primoSchwank 20	100" [254]	36" [91]	18" [46]	48" [122]
primoSchwank 30	105" [267]	42" [107]	18" [46]	48" [122]
supraSchwank 10	90" [229]	30" [76]	16" [41]	48" [122]
supraSchwank 15	96" [244]	30" [76]	16" [41]	48" [122]
supraSchwank 20	100" [254]	33" [84]	16" [41]	48" [122]
supraSchwank 30	105" [267]	36" [91]	16" [41]	48" [122]

SUSPENDED AT AN ANGLE OF 30° *: *Measured from outer surface of heater*

MODEL	BELOW 'C' Inches [cm]	FRONT 'F' Inches [cm]	BACK 'B' Inches [cm]	TOP 'A' Inches [cm]	ENDS 'E' Inches [cm]
primoSchwank 10	67" [170]	67" [170]	8" [20]	24" [61]	48" [122]
primoSchwank 15	66" [168]	66" [168]	8" [20]	24" [61]	48" [122]
primoSchwank 20	70" [178]	70" [178]	8" [20]	24" [61]	48" [122]
primoSchwank 30	74" [188]	74" [188]	8" [20]	24" [61]	48" [122]
supraSchwank 10	66" [168]	66" [168]	8" [20]	24" [61]	48" [122]
supraSchwank 15	66" [168]	66" [168]	8" [20]	24" [61]	48" [122]
supraSchwank 20	69" [175]	69" [175]	8" [20]	24" [61]	48" [122]
supraSchwank 30	72" [183]	72" [183]	8" [20]	24" [61]	48" [122]

NOTE: Suspended between horizontal and 30°: Use the largest clearance from each column

~ See additional notes on previous & next pages ~

The clearance to combustible materials represents the minimum distance that must be maintained between the heater and a nearby surface. **The stated clearance to combustibles represents a surface temperature of 90F° (50C°) above room temperature.**

It is the installer's responsibility to ensure that building materials with a low heat tolerance which may degrade at lower temperatures are protected to prevent degradation.

Examples of low heat tolerance materials include vinyl siding, fabrics, some plastics, filmy materials, etc.



WARNING In locations used for the storage of combustible materials **signs must be posted** specifying the *maximum permissible stacking height* to maintain the required clearances from the heater to the combustibles.

The signs must be posted either adjacent to the IR heating system thermostats or in the absence of such thermostats, in a conspicuous place.

For your convenience a “peel and stick” sign is provided with this heater.


Use a permanent marker to record the required dimensions on the sign.

To calculate the value ‘H’ (Maximum Material Stacking Height):

Maximum Material Stacking Height: $H = T$ (distance from heater to floor) minus C (the combustibles clearance below the heater)

or $H = T - C$

- Measure the on-site distance between bottom of the heater and the floor = ‘T’ inches (cm).
- Refer to Table 1 to get the value ‘C’ (clearance to combustibles below heater) that corresponds to the model you are installing
- Subtract the clearance below the heater ‘C’ from ‘T’ to get value ‘H’ (maximum material stacking height).
- Enter this value ‘H’ on the sign with permanent marker.
- Then, for the heater model/size being installed, refer to the information in Figure 1 and Table 1 to get the values for dimensions ‘S’, ‘F’ and ‘B’ (F and B are for ‘angle mounted’ heaters only).

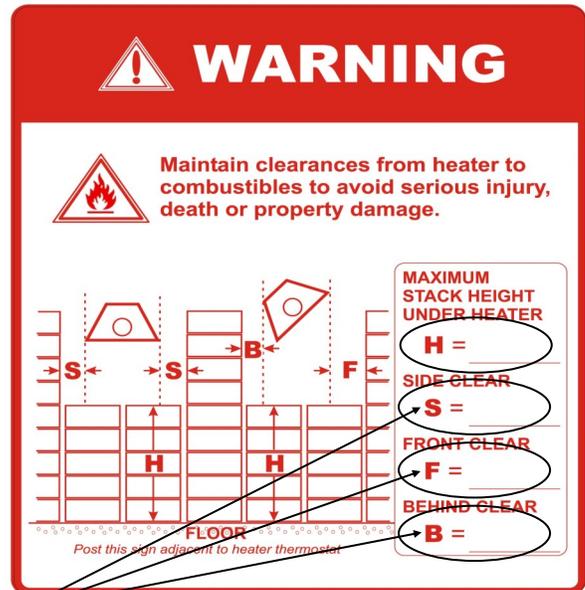

Post this sign as instructed above.

1. GENERAL APPLICATION

A gas-fired radiant heater may be installed for heating of commercial / industrial non-residential spaces. It is beyond the scope of these instructions to consider all conditions that may be encountered. Installation must conform with all local building codes or, in the absence of local codes, with the National Fuel Gas Code, ANSI Z223.1/NFPA 54 in the U.S.A. or the Natural Gas and Propane Installation Code, CSA B149.1 in Canada. The latest edition Electrical Code ANSI/NFPA N0 70 in the U.S.A. and PART 1 CSA C22.1 in Canada must also be observed.

Installation of a gas-fired radiant heater must conform to all heating installation design procedures including clearance to combustibles, connection to the gas and electrical supplies, and ventilation.

This heater is not for installation in a Class 1 or Class 2 explosive environment, nor a residence. If installation of this equipment is in question, consult with local authorities having jurisdiction (Fire Marshall, labor department, insurance underwriter, or others).

Revisions to codes and/or standards, may require revision to equipment and installation procedures. In case of discrepancy, the latest codes, standards, and installation manual will take priority over prior releases.

Models primoSchwank and supraSchwank may be installed for heating of commercial / industrial non-residential **indoor spaces**.

IMPORTANT: DO NOT INSTALL THIS HEATER IN A STRUCTURE THAT HAS NO INSULATION IN THE ROOF - CONDENSATION WILL OCCUR.

This heater must not be installed inside a degreasing plant, nor in an area where chlorine, fluorine or bromine are present.

LABOR REQUIRMENTS

Two persons are required to safely install this equipment. Wear gloves and other required safety protection.

2. INSTALLATION IN COMMERCIAL AIRCRAFT HANGARS

Luminous (high intensity) radiant tube heaters are suitable for use in aircraft hangars when installed in accordance with the latest edition of the Standard for *Aircraft Hangars*, ANSI/NFPA No 409 in the USA, or the *Canadian Natural Gas and Propane Installation Code*, B149.1.

- A. A minimum clearance of 10 ft (3 m) above either the highest fuel storage compartment or the highest engine enclosure of the highest aircraft which may occupy the hangar. The clearance to the bottom of the heater shall be measured from the upper surface of either the fuel storage compartment or the engine enclosure, whichever is higher from the floor.
- B. A minimum clearance of 8 ft (2.4 m) must be maintained from the bottom of the heater to the floor in other sections of the aircraft hangar, such as offices and shops, which communicate with areas for servicing or storage. Refer to Table 1 for proper mounting clearances to combustibles.
- C. Heaters must be located so as to be protected from damage by aircraft and other objects, such as cranes and movable scaffolding.
- D. Heaters must be located so as to be accessible for servicing and adjustment.

3. INSTALLATION IN COMMERCIAL GARAGES AND PARKING STRUCTURES

Luminous (high intensity) radiant heaters are suitable for use in commercial garages when installed in accordance with the latest edition of the Standard for *Parking Structures*, ANSI/NFPA 88A, or the Standard for *Repair Garages*, ANSI/NFPA No. 88B, or the Canadian *Natural Gas and Propane Installation Code*, B149.1.

 WARNING	<p>An overhead heater shall be located high enough to maintain the minimum distance to combustibles, as shown on the heater rating plate, from the heater to any vehicles parked below the heater.</p> <p>Overhead heaters shall be installed at least 8 ft (2.4 m) above the floor.</p>
--	--

4. INSTALLATIONS OTHER THAN SPACE HEATING

Use for process or other applications that are not space heating will void the C.S.A. certification and product warranty. Process application requires field inspection and/or certification by local authorities having jurisdiction. Process application design should be provided by local experienced process design experts.

5. PRE INSTALLATION SURVEY

It is recommended that a full heating design including heat loss calculation be conducted on the structure or area to be heated. Heater sizing and placement must consider available mounting height, sources of greatest heat loss, and obstructions on the site. The certified clearances to combustibles with respect to stored material, moveable objects (cranes, vehicles, lifts, overhead doors, etc), structural components, and sprinkler system heads. Consideration must also be given to ventilation fan placement. Carefully survey the area to be heated, and for best results place heaters in the coldest area(s) and at sufficient spacing to provide radiant heat coverage.

Installation must conform with all local, state, provincial and national code requirements including the current latest edition ANSI Z223.1 (NFPA 54) in the U.S.A. and B149.1 installation code in Canada, for gas burning appliances and equipment. The latest edition Electrical Code ANSI/NFPA N0 70 in the U.S.A. and PART 1 CSA C22.1 in Canada must also be observed.

The heating system must have gas piping of the correct diameter, length, and arrangement to provide for the total system input. A layout drawing is necessary to calculate properly sized gas supply piping.

6. MOUNTING CLEARANCES

This heater must be mounted with at least the minimum clearances between the heater and combustibles as shown in FIG-1, TABLE 1, Page 7. The clearances to combustible material represent a surface temperature of 90 F° (50 C°) above ambient. It is the installer's responsibility to ensure that building materials with a low heat tolerance which may degrade at lower temperatures are protected to prevent degradation.


Positioning of lights, sprinkler heads, overhead doors, storage areas, gas and electrical lines, parked vehicles, cranes and any other possible obstruction or hazard must be evaluated prior to installation.

Ensure adequate clearance around the air intake at the burner to allow sufficient combustion air supply to the heater.

6A. SERVICE CLEARANCE: To allow servicing of burner and controls, provide a minimum clearance of 24 inches (61 cm) from the gas supply / ignition-controls of the heater to a wall or obstruction . (see Figure 2 below) - the minimum clearances to combustibles must always be maintained.

For guidelines to heater placement refer to TABLE 2 (next page).

FIGURE 2: SERVICE CLEARANCE

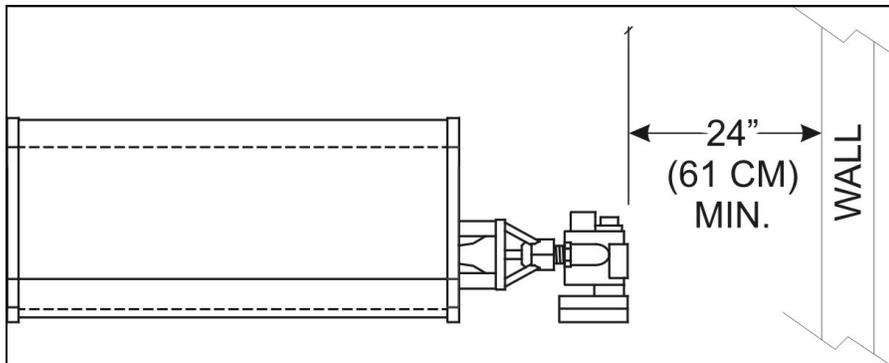

7. HEATER MOUNTING / PLACEMENT

The **primoSchwank / supraSchwank** Combined Intensity Heaters are approved for both horizontal and angle mounting.

IMPORTANT: When angle mounting, the short axis may be rotated to a maximum of 30° with the venturi always in the upper position. Improper angle mounting can result in damage to the heater or unsafe operation.

For either horizontal or angle mounting, the long axis of the heater must be level. Use only non-combustible mounting hardware.

See FIGURE 3 and TABLE 2 next page for 'Typical Layout Mounting Distances'

TABLE 2: SUGGESTED LAYOUT MOUNTING DISTANCES FOR COMFORT*


SUSPENDED HORIZONTALLY TO 30°:

MODEL primoSchwank or supraSchwank	TYPICAL ABOVE FLOOR < X >	TYPICAL BETWEEN HEATERS < Y >	TYPICAL BETWEEN ROWS < Z >
10	15' (460 cm)	25' (760 cm)	30' (915 cm)
15	18' (550 cm)	30' (915 cm)	40' (1220 cm)
20	20' (610 cm)	35' (1070 cm)	50' (1525 cm)
30	24' (730 cm)	45' (1370 cm)	70' (2135 cm)

SUSPENDED AT AN ANGLE 30° TO 45°:**

MODEL primoSchwank or supraSchwank	TYPICAL ABOVE FLOOR < X >	TYPICAL BETWEEN HEATERS < Y >	TYPICAL BETWEEN ROWS < Z >
10	13' (400 cm)	25' (760 cm)	50' (1525 cm)
15	16' (490 cm)	30' (915 cm)	75' (2290 cm)
20	18' (550 cm)	35' (1070 cm)	100' (3050 cm)
30	21' (640 cm)	45' (1370 cm)	140' (4270 cm)

FIGURE 3: SUGGESTED SPACING FOR COMFORT

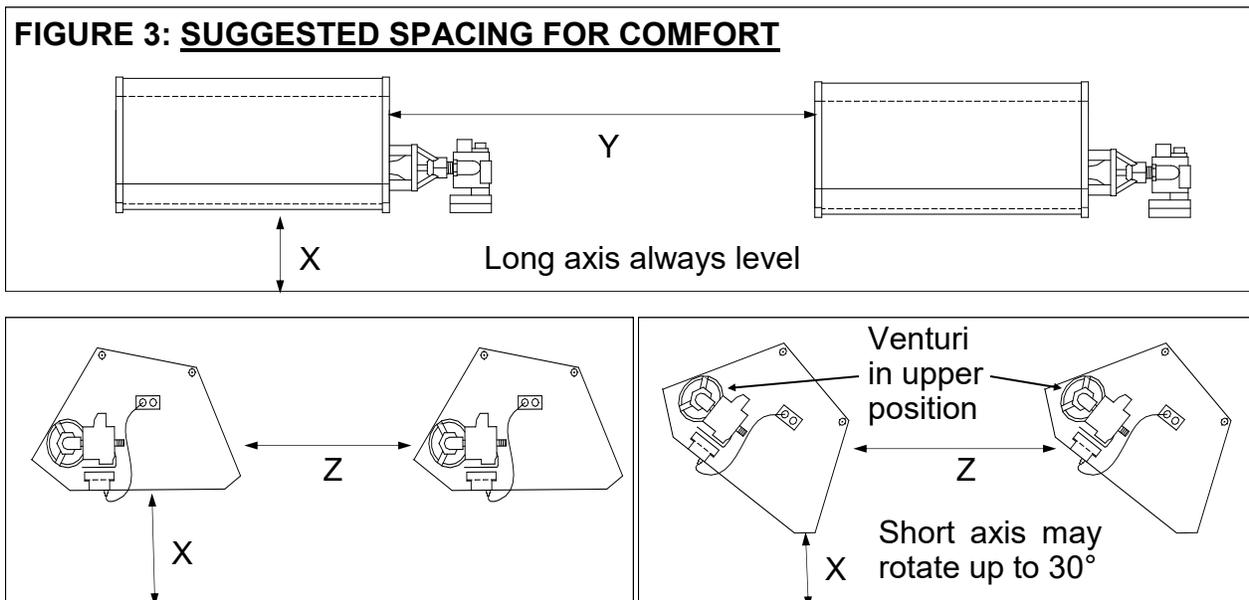

* The Mounting distances are suggested, and may vary depending on insulation values, air movement / change, and other site conditions. If in doubt, please contact Schwank Technical Services.

For 'spot' heating, the distance above the floor can be reduced by 2 to 4 feet (61 to 132 cm) depending upon site conditions.



**** IMPORTANT:** When angle mounted the gas-inlet/venturi side of the heater **MUST BE IN THE UPPER POSITION.**

8. VENTILATION



WARNING



Inadequate venting of a heater may result in asphyxiation, carbon monoxide poisoning, injury or death. Heating system venting must be in accordance with all local, state, provincial, and national codes (ANSI Z223.1/NFPA 54 in USA; B149.1 in Canada).

This heater is approved for unvented (indirect venting) application. Ensure that there is adequate ventilation to supply combustion air and to dilute the products of combustion in accordance with all local, state, provincial, and national codes. A balanced exhaust / inlet air system is required to ensure that a negative air condition is not created. See below for a summary of exhaust capacity requirements by the national codes in the U.S.A. and Canada.

Air Supply: “Loose” buildings may not require any additional air supply if infiltration rates are sufficient. However, for “tighter” buildings, or if air movement is stagnant in an area, air can typically be supplied via inlet(s) with an area of 1 sq. in. per 1,000 Btuh input (22 sq cm per kW). Locate air inlet(s) up at the level of the heaters to avoid cold drafts at work level, and effectively supply combustion and dilution air to the heaters and balance the system.

Heater Zoning: Exhausters are sized according to the input requirements of each controlled zone of heaters. Multiple smaller zones are usually more effective in both comfort and ventilation control than one large zone. Maximum zone size is limited by the total input that can be handled by the capacity of an exhauster, and by the proximity of the exhauster to heaters in the zone.

Exhauster Location & Proximity: Exhaust must be located as high as practicable in the structure above the level of the heater(s) to effectively dilute and remove the warm (rising) products of combustion. The exhauster should be as centrally located as practicable in the zone of heaters. Schwank recommends a maximum 6:1 ratio of the horizontal distance between the exhauster and the furthest heater in a zone, to the height the heaters are mounted above the floor. For example, if heaters are mounted 20 ft above the floor, then the exhaust fan should be located no more than 120 ft from the furthest heater in the zone. Sufficient air supply must be provided.

Exhauster Capacity:

USA: Natural or mechanical means shall be provided to supply and exhaust at least 4ft³/min/1000Btuh (0.38m³/min/kW) Natural Gas input of installed heaters [4.5ft³/min/1000Btuh (0.43m³/min/kW) Propane input]. Some local codes may require an interlock to a dedicated exhaust fan. Consult your local code and ANSI Z223.1 latest edition for all venting requirements and practices.

Canada: It is required that the heater(s) be electrically interlocked to dedicated exhaust fan(s) by means of an Air Proving Switch. Exhaust fan(s) must be sized to create 300 cfm (8.5 cu m/min) exhaust for every 100,000 Btuh (30 kW) or any fraction thereof of total input of installed equipment. Provide combustion and ventilation air supply compatible with exhaust volume. Consult the latest edition of CSA.B149.1 Section 7.22.

9. GAS SUPPLY PIPING

 WARNING	Install and connect gas lines in accordance with local, state, provincial and national codes (ANSI Z223.1/NFPA 54 in USA; B149.1 in Canada). Incorrect installation and connection of gas lines may result in fire, explosion, property damage, injury or death
  	
Do not install any gas piping or wiring in the heat zone directly above the heater. Do not subject heater controls to leak test pressures when checking the main supply piping.	

- A. Gas piping must be sized to provide adequate input capacity to all heaters and appliances in the system and at the pressure indicated in Table 3 below.

IMPORTANT: Minimum supply line pressure at the inlet to the heater regulator must not be lower than 6.0 inches of water column pressure for natural gas and 12" w.c. for propane. The supply gas pressure must be checked with all heaters in operation.

- B. Provide a 1/8 in (3.2 mm) NPT plugged tapping, accessible for test gauge connection, immediately upstream of the gas supply connection to the heater.
- C. It is recommended to install an approved flexible connector between the heater and gas piping - available as option from Schwank or from your local supplier.
- D. A drip-leg prior to the inlet connection to the heater must be provided in the gas line.
- E. On propane-fired units, a main line filter is recommended.
- F. Piping joint compounds must be resistant to the action of natural gas or LPG
- G. **TEST FOR LEAKS:** Apply soap suds solution to all connections and joints and if bubbles appear, leaks have been detected and must be corrected. **DO NOT USE A MATCH OR OPEN FLAME OF ANY KIND TO TEST FOR LEAKS. NEVER OPERATE THE HEATER WITH LEAKING CONNECTIONS.** Leak test according to local or national codes.

DO NOT use pressure greater than 1/2 psig to pressure check the heater.

The supply system should be checked first with heater turned "OFF" followed by another check with heater turned "ON".

GAS SUPPLY PRESSURE: The maximum supply pressure must be limited to 14 inches w.c. (0.51 psi). If the line pressure is above 14 inches w.c. then a separate pressure reducing regulator must be used - follow all codes. The minimum pressure at the inlet to the heater regulator must be equal to or greater than 6.0 inches w.c. for NG and 12 inches w.c. for LP. A sealed regulator is supplied with the heater which maintains the proper manifold pressure when the main burner is operating under the following pressures:

TABLE 3

	LINE PRESSURE (" w.c.)		MANIFOLD PRESSURE inches w.c. AT TAP IN GAS VALVE
	MINIMUM	MAXIMUM	
NATURAL GAS	6.0	14.0	5.0
PROPANE GAS	11.0	14.0	10.0

10 ELECTRICAL REQUIREMENTS AND THERMOSTAT CONTROL

All electrical installations must meet local codes and the latest edition Electrical Code PART 1 CSA C22.1 in Canada and ANSI/NFPA N0 70 in the U.S.A..

TRANSFORMER SPECIFICATIONS

Single heater requires 24 Volt, 60 Hz electrical transformer sized at 40 VA.

Multiple heaters in a zone are powered by a single transformer. The proper transformer is 24 Volt AC, 60 Hz, sized at 40 VA for the first heater plus 20VA for each additional heater in the zone - round up the calculated value to the next higher available sized transformer. For example, four heaters in a zone require a transformer of : $1 \times 40VA + 3 \times 20 VA = 100 VA$. It is not recommended to install more than 12 heaters per zone.

PROPER WIRING POLARITY MUST BE MAINTAINED, particularly when grouping the heaters in a zone. Total wiring distances of up to 200' must use minimum 16 gauge electrical wire, and wiring distances of over 200' must use minimum 14 gauge electrical wire. The heater must be electrically grounded in accordance with local and national electrical codes. Malfunction of the heating system will result if the voltage varies by more than +10% or -10%.

The heater can be controlled by a line voltage thermostat, a 24 volt thermostat or "off-on" switch. Total load of all heaters must be considered in determining the required contact rating of the controlling thermostat or switch.

11. INSTALLATION

- A. Properly size and install ventilation as per Section 8, gas supply as outlined in Section 9, previous page, and electrical supply as per Section 10 above.
- B. Ensure adequate clearance around air openings into the combustion chamber
- C. The ignition control assembly is shipped in the carton with the heater. Assemble the gas valve / ignition control assembly to the heater at the gas-supply union.
- D. Suspended infrared heaters shall be fixed in position independent of gas and electric supply lines. Hangers and brackets shall be of non-combustible material. Heaters subject to vibration shall be provided with vibration-isolating hangers.
- E. Suspension hardware must be of adequate capacity to support the weight of the heater - see Table 4 next page. Typical suspension chain is #8 Jack Chain (60 lb work load rating) and/or #2 Lion Chain (also called "Double Loop" Chain) (115 lb work load rating).
- F. For Seismic & Wind condition suspension see Figure 7 page 18
- G. Mounting at an **angle of up to 30°**: see Figure 6 page 18
 - Rotate on the short axis only - long axis must always be horizontal
 - The venturi side of the heater must be in the upper position when angle mounted
 - The 'center of gravity' of the heater allows angle mounting up to 30° using the suspension tabs attached to the heater
- E. Mounting at an **angle greater than 30° up to 45°**: see Figure 6 page 18
 - Rotate on the short axis only - long axis must always be horizontal
 - The gas-supply/venturi side of heater must be in the upper position when angle mounted
 - The heater requires an Angle Mounting Bracket (JO-0331-XX - available as an optional accessory) for angle mounting over 30° up to 45° - the Angle Mounting Bracket bolts to the suspension tabs on the heater - see Figure 6 page 18
- F. Mount heaters to structure by using non-combustible mounting hardware such as that illustrated in FIGURE 5 on page 18.
- G. Observe the minimum clearances to combustibles as per the Clearance To Combustibles section and Figure 1 and Table 1 pages 6, 7.
- H. *In locations used for the storage of combustible materials, signs shall be posted to specify the maximum permissible stacking height to maintain required clearances from the heater to the combustible materials. SEE PAGE 8*
- I. Connect heater to the main gas line. It is recommended to use a 1/2" flexible connector (available as option from Schwank) to absorb gas line expansion and any vibration from the building. The flexible gas connector must be formed into a smooth 'C' shape.
- J. Mount thermostat at desired location, away from direct infra-red rays of heater. If the thermostat is located on a cold wall, place sufficient insulation behind the thermostat.
- K. Test gas line for leaks by using gas pressure test and/or soap test and as per all local and national codes. Ensure gas pressure meets the requirements outlined in Section 9.
When testing the main gas line pressure, ensure the gas shut-off valve is "OFF", otherwise damage to the combination gas valve can result.
- L. Test fire the heating system by following the lighting instructions on the next page and on heater.

FIGURE 4: DIMENSIONS: primoSchwank & supraSchwank

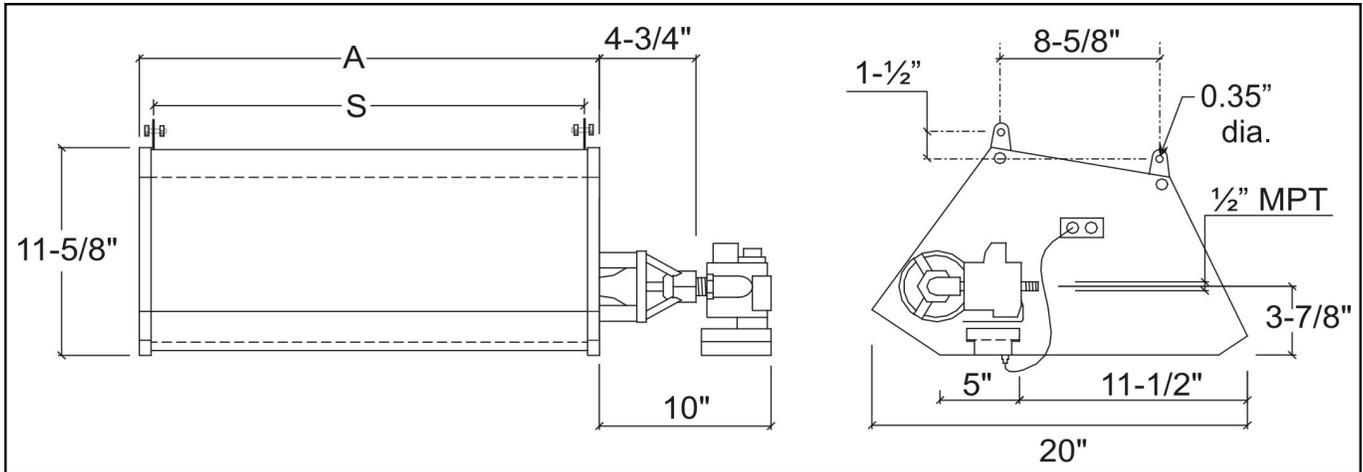


TABLE 4: DIMENSIONS / WEIGHT / CAPACITY

primoSchwank MODEL	'A' In. [cm]	'S' In. [cm]	WEIGHT Lbs. [kg]	CAPACITY		
				GAS TYPE	INPUT Btuh [kW]	IR OUTPUT Btuh [kW]
primoSchwank 10	23.75" [60.3]	21.7" [55.1]	23.5 [10.7]	NG	37,500 [11]	24,600 [7.2]
				LPG	34,100 [10]	22,370 [6.6]
primoSchwank 15	34.50" [87.6]	32.6" [82.8]	33.6 [15.2]	NG	56,000 [16]	35,400 [10.4]
				LPG	51,000 [15]	32,230 [9.4]
primoSchwank 20	45.62" [116]	43.5" [110.5]	40.3 [18.3]	NG	75,000 [22]	49,050 [14.4]
				LPG	68,500 [20]	44,800 [13.1]
primoSchwank 30	67.32" [171]	65" [165]	54.9 [24.9]	NG	113,000 [33]	76,500 [22.4]
				LPG	103,000 [30]	69,730 [20.4]

supraSchwank MODEL	'A' In. [cm]	'S' In. [cm]	WEIGHT Lbs. [kg]	CAPACITY		
				GAS TYPE	INPUT Btuh [kW]	IR OUTPUT Btuh [kW]
supraSchwank 10	23.87" [60.6]	21.7" [55.1]	37 [17]	NG	29,500 [9]	22,800 [6.7]
				LPG	27,000 [8]	20,850 [6.1]
supraSchwank 15	34.60" [87.9]	32.6" [82.8]	53 [24]	NG	44,000 [13]	34,630 [10.1]
				LPG	40,500 [12]	31,870 [9.3]
supraSchwank 20	45.75" [116]	43.5" [110.5]	62 [28]	NG	59,000 [17]	46,730 [13.7]
				LPG	54,500 [16]	43,160 [12.6]
supraSchwank 30	67.5" [171]	65" [165]	82 [37]	NG	88,500 [26]	71,700 [21.0]
				LPG	81,500 [24]	66,100 [19.4]

FIGURE 5: TYPICAL SUSPENSION HARDWARE (supplied by others)



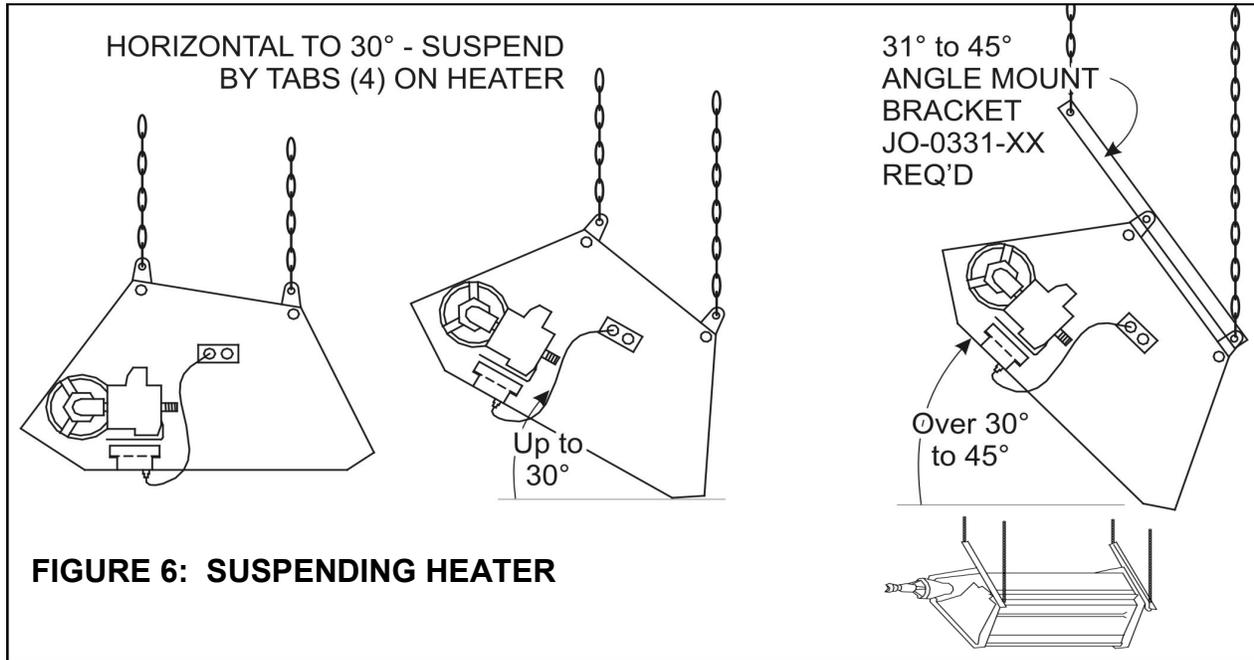


FIGURE 6: SUSPENDING HEATER

NOTE: Hardware attachment to structure as per site conditions, and/or local code, engineered design requirements. All seismic mounting hardware field supplied by installer.

FIGURE 7: SEISMIC & WIND SUSPENSION

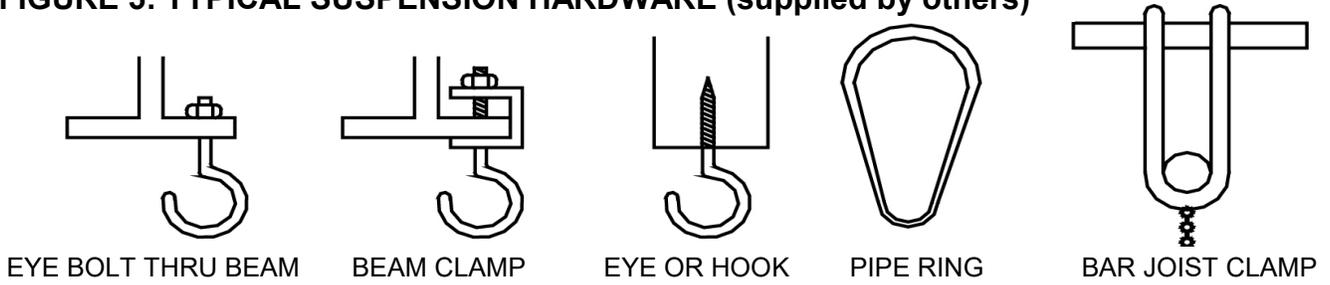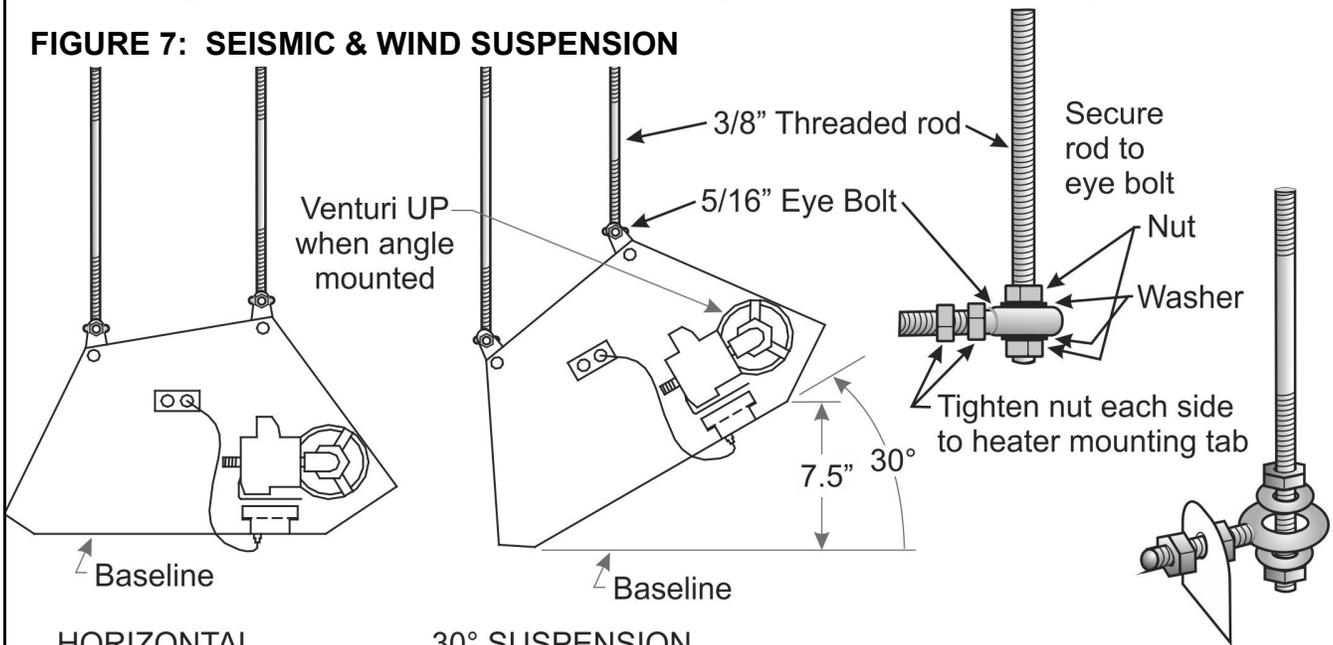

Measure to Base Point from any horizontal surface. At 30° mounting angle, the 'upper edge' is 7.5" higher than the Base Point

12. LIGHTING INSTRUCTIONS

- A Open the isolation valve in the main gas line and turn gas control knob on the combination gas valve to the “ON” position.
- B Switch on electrical circuit by turning the thermostat to the highest temperature setting.
- C The heater should attempt ignition and remain lit within thirty seconds. Note that the corresponding exhaust fan is operating properly.
- D If ignition does not occur, then cut off electrical power by turning the thermostat to off position.



If heater back-fires during operation it must be turned off immediately.

Indication of back-firing:

- A. Loud ignition noise, then followed by distinct hissing sound.
- B. Little or no visible burning on the ceramic tile.
- C. Combustion is taking place inside the burner body.

Cause & remedy of back-firing:

- A. Improper gas pressure entering the venturi tube = test & remedy gas pressure.
- B. Breakage of a ceramic tile and or gasket = replace damaged part.
- C. Faulty sealing of the ceramic tile to the burner body, caused by breakdown of gasket material = contact your Schwank distributor.

13. SHUT DOWN INSTRUCTIONS

- A. Turn off electrical circuit for temporary shutdown.
- B. Turn off the electrical circuit, close gas stop-cock in gas supply line, and turn gas control knob to the “OFF” position for complete shut-down.

14. DISCOLORATION OF HEATER BODY

Under certain conditions in some locations/environments, surface discoloration may occur on the heater body where the products of combustion discharge from the heater. **This discoloration is due the deposit of ambient air borne particulate or gases that have passed through combustion. The combustion of fuel gas in a clean environment will not cause any discoloration. The discoloration does not affect the operation of the heater nor the manufacturer’s warranties.**


15. FENWAL 35-60 - WIRING DIAGRAM - 24V CONTROL (Honeywell Control previous page)

Note: Power supply: Provide disconnect means and overload protection as required by local and/or national code..

Maintain polarity at control modules.

* Size system transformer: 40VA first heater + 20VA each additional heater


Front View Control Center (Transformer Connection)

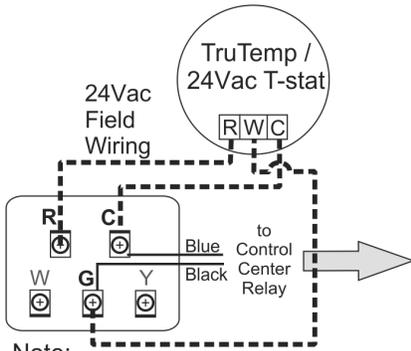


Note:
2-Wire 24V Thermostat connect to 'G' & 'R'.

Back View Control Center (Relay Switch Output Connection)

N L (120V)

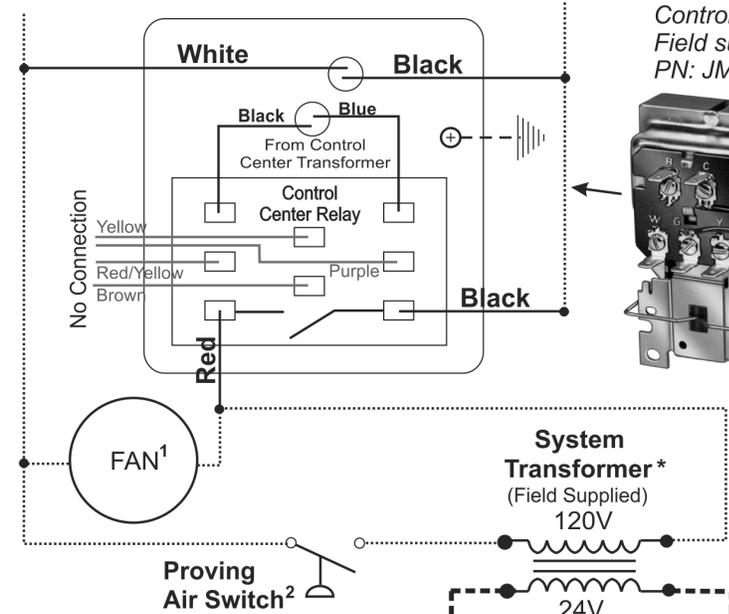



Control Center Field supplied PN: JM-0300-XX

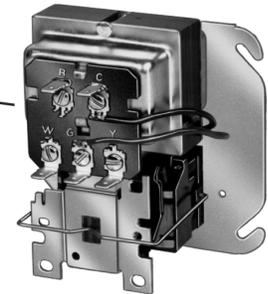

Field Wiring

..... Line Voltage (120V)

----- Low Voltage (24V)

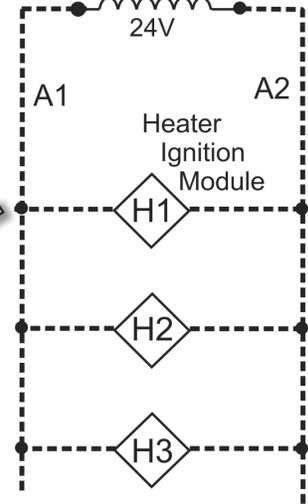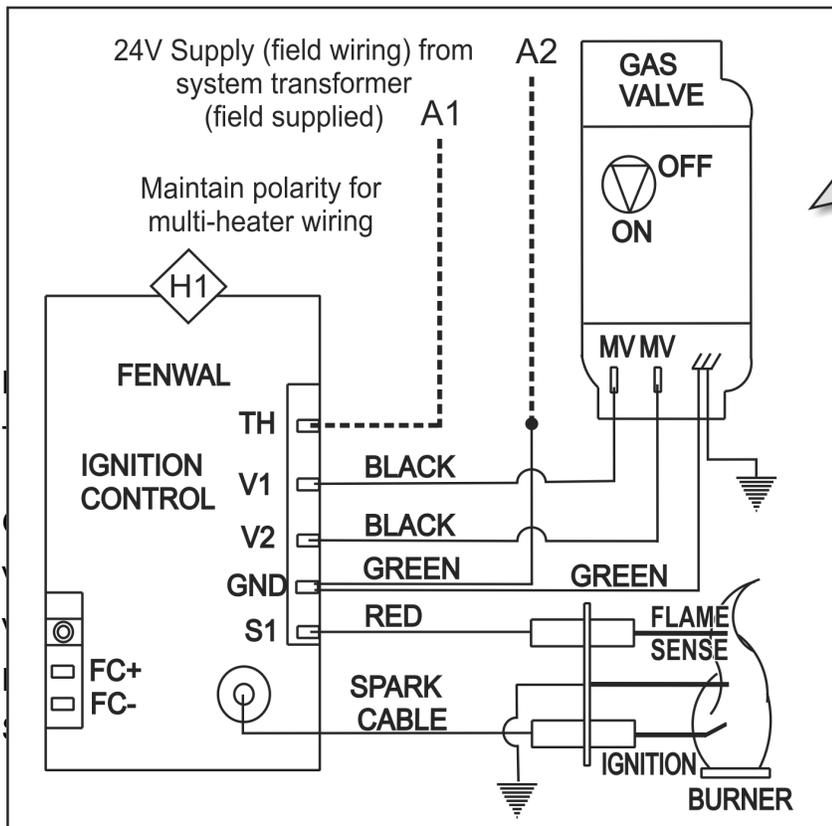

- 1 Fan Capacity**
- USA
4 cfm / 1,000 Btuh Input
 - CANADA
300 cfm / 100,000 Btuh Input
- 2 Proving Air Switch**
- Canada: Interlock required
 - May not be required USA
 - Check local codes

16. FENWAL 35-60 - WIRING DIAGRAM - 120V CONTROL (Honeywell Control previous page)

Note: Power supply: Provide disconnect means and overload protection as required by local and/or national code.

Maintain polarity at control modules.



* Size system transformer: 40VA first heater + 20VA each additional heater

1 Exhaust Fan Capacity
 USA: 4 cfm / 1,000 Btuh Input
 CANADA: 300 cfm / 100,000 Btuh Input

2 Proving Air Switch
 USA: Interlock may not be required
 - Check local codes
 Canada: Interlock required

Field Wiring

..... Line Voltage (120V)
 - - - - - Low Voltage (24V)

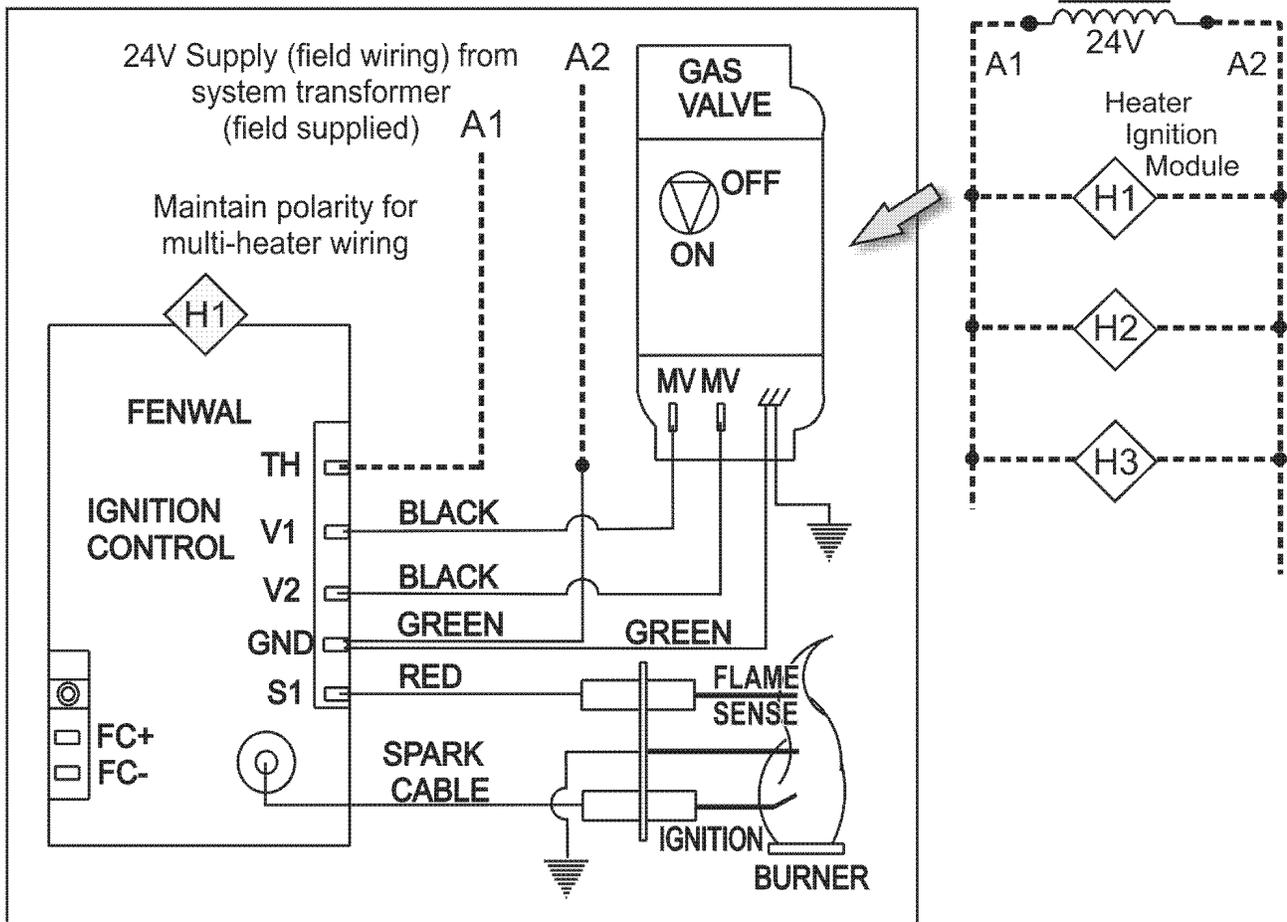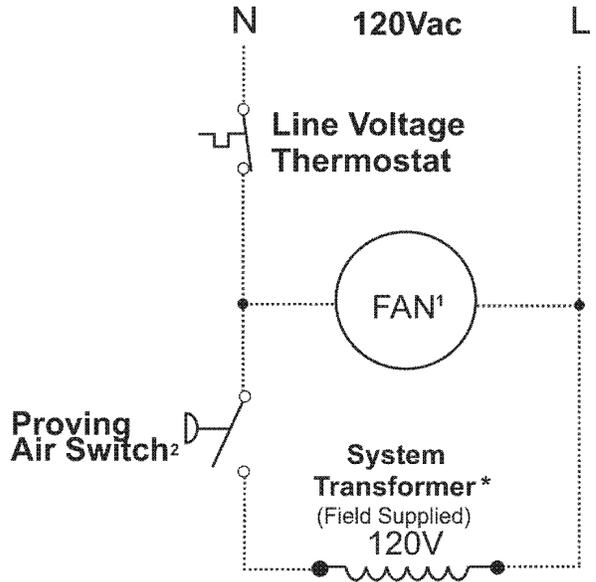

17. SERVICE GUIDE



WARNING



Improper installation, adjustment, alteration, service or maintenance can cause property damage, injury or death. Read and understand this installation and operation manual thoroughly prior to assembly, installation, operation or service to this appliance.



This heater must be installed and serviced only by a trained gas service technician.

Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other gas fired appliance.



Failure to comply could result in personal injury, death, fire and/or property damage.

Do not store or use gasoline or other flammable vapours and liquids in the vicinity of this or any other gas fired appliance.

This appliance may have sharp edges and corners. Wear protective clothing such as gloves and protective eye wear when servicing this or any other appliance.


Servicing of heater is essential for continued efficient operation. Servicing should be performed at minimum annually by qualified service personnel.


- A. Visually inspect the tiles for cracks or blockage:
 - A crack or blockage will appear as a 'dark' line or spot on the tile surface during operation
- B. Clean the ceramic tile with compressed air. Avoid directing air stream at the gasket material between tile and heater body. The air pressure must be lower than 20 psi.
- C. Clean the venturi tube with compressed air.
- D. Clean the reflectors.
- E. Confirm gas and electrical supplies are at required settings - see Sections 9 and 10
- F. Ensure that the gas valve is operating properly and that no particulate matter is fouling the seating of the valve and allowing gas leakage - replace valve if necessary.


18. TROUBLESHOOTING GUIDE

LED	Error Mode
Steady on	Internal Control Failure
2 flashes	Flame with No Call for heat
3 flashes	Ignition Lockout

SET THERMOSTAT TO CALL FOR HEAT

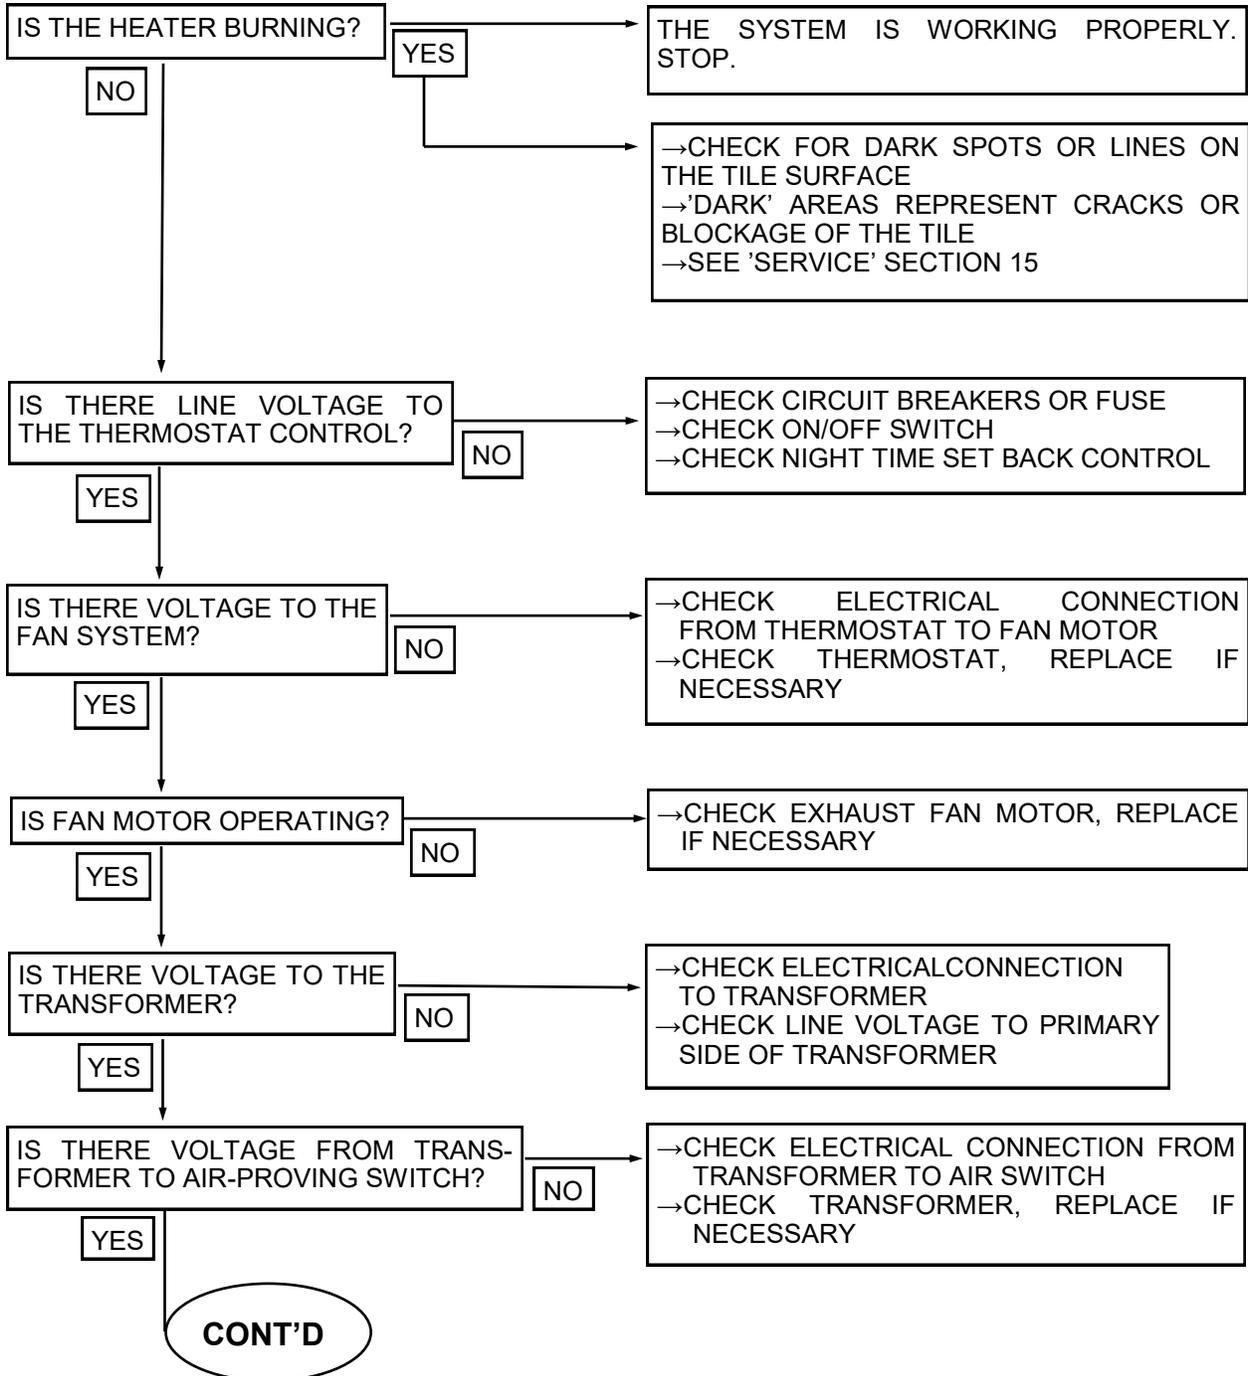

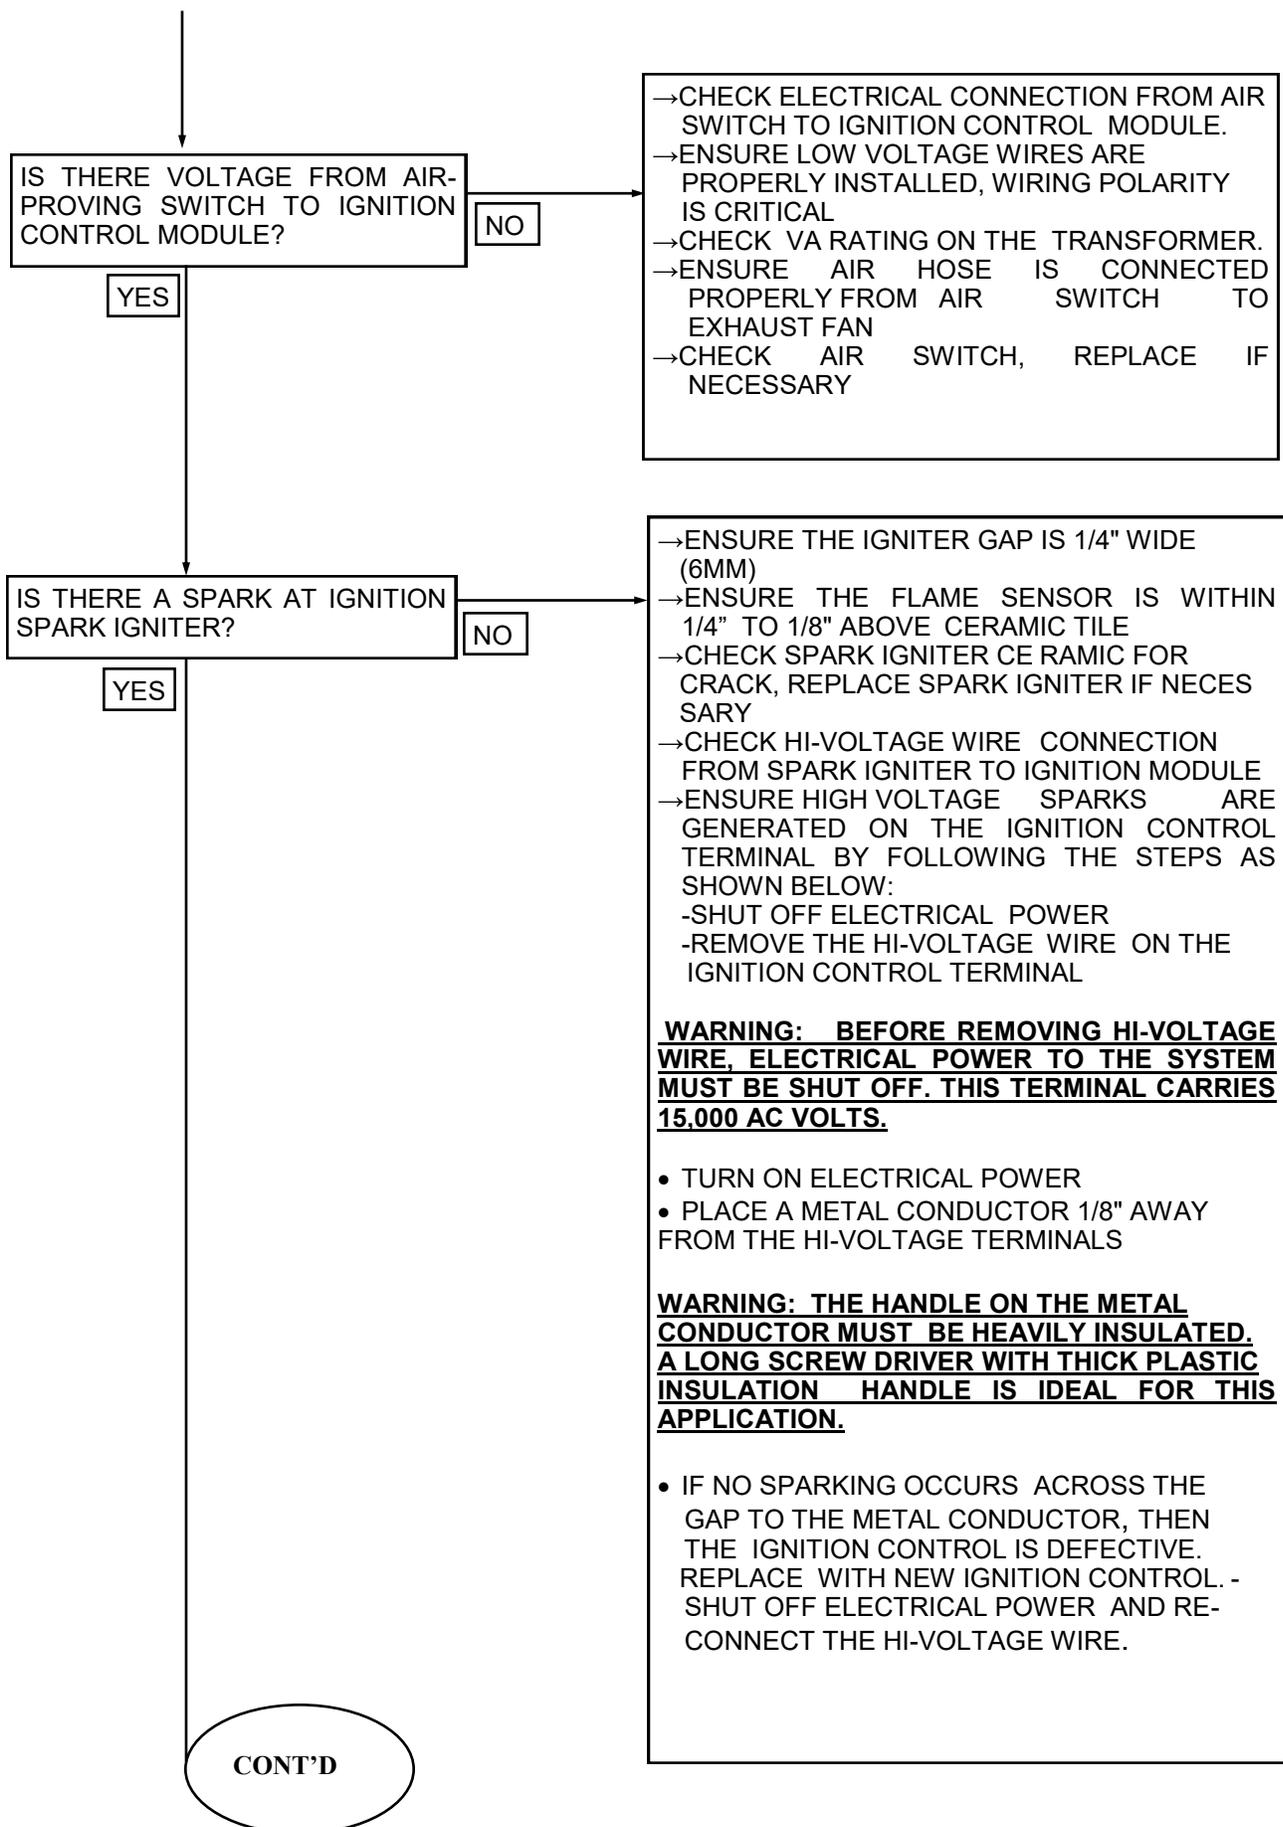

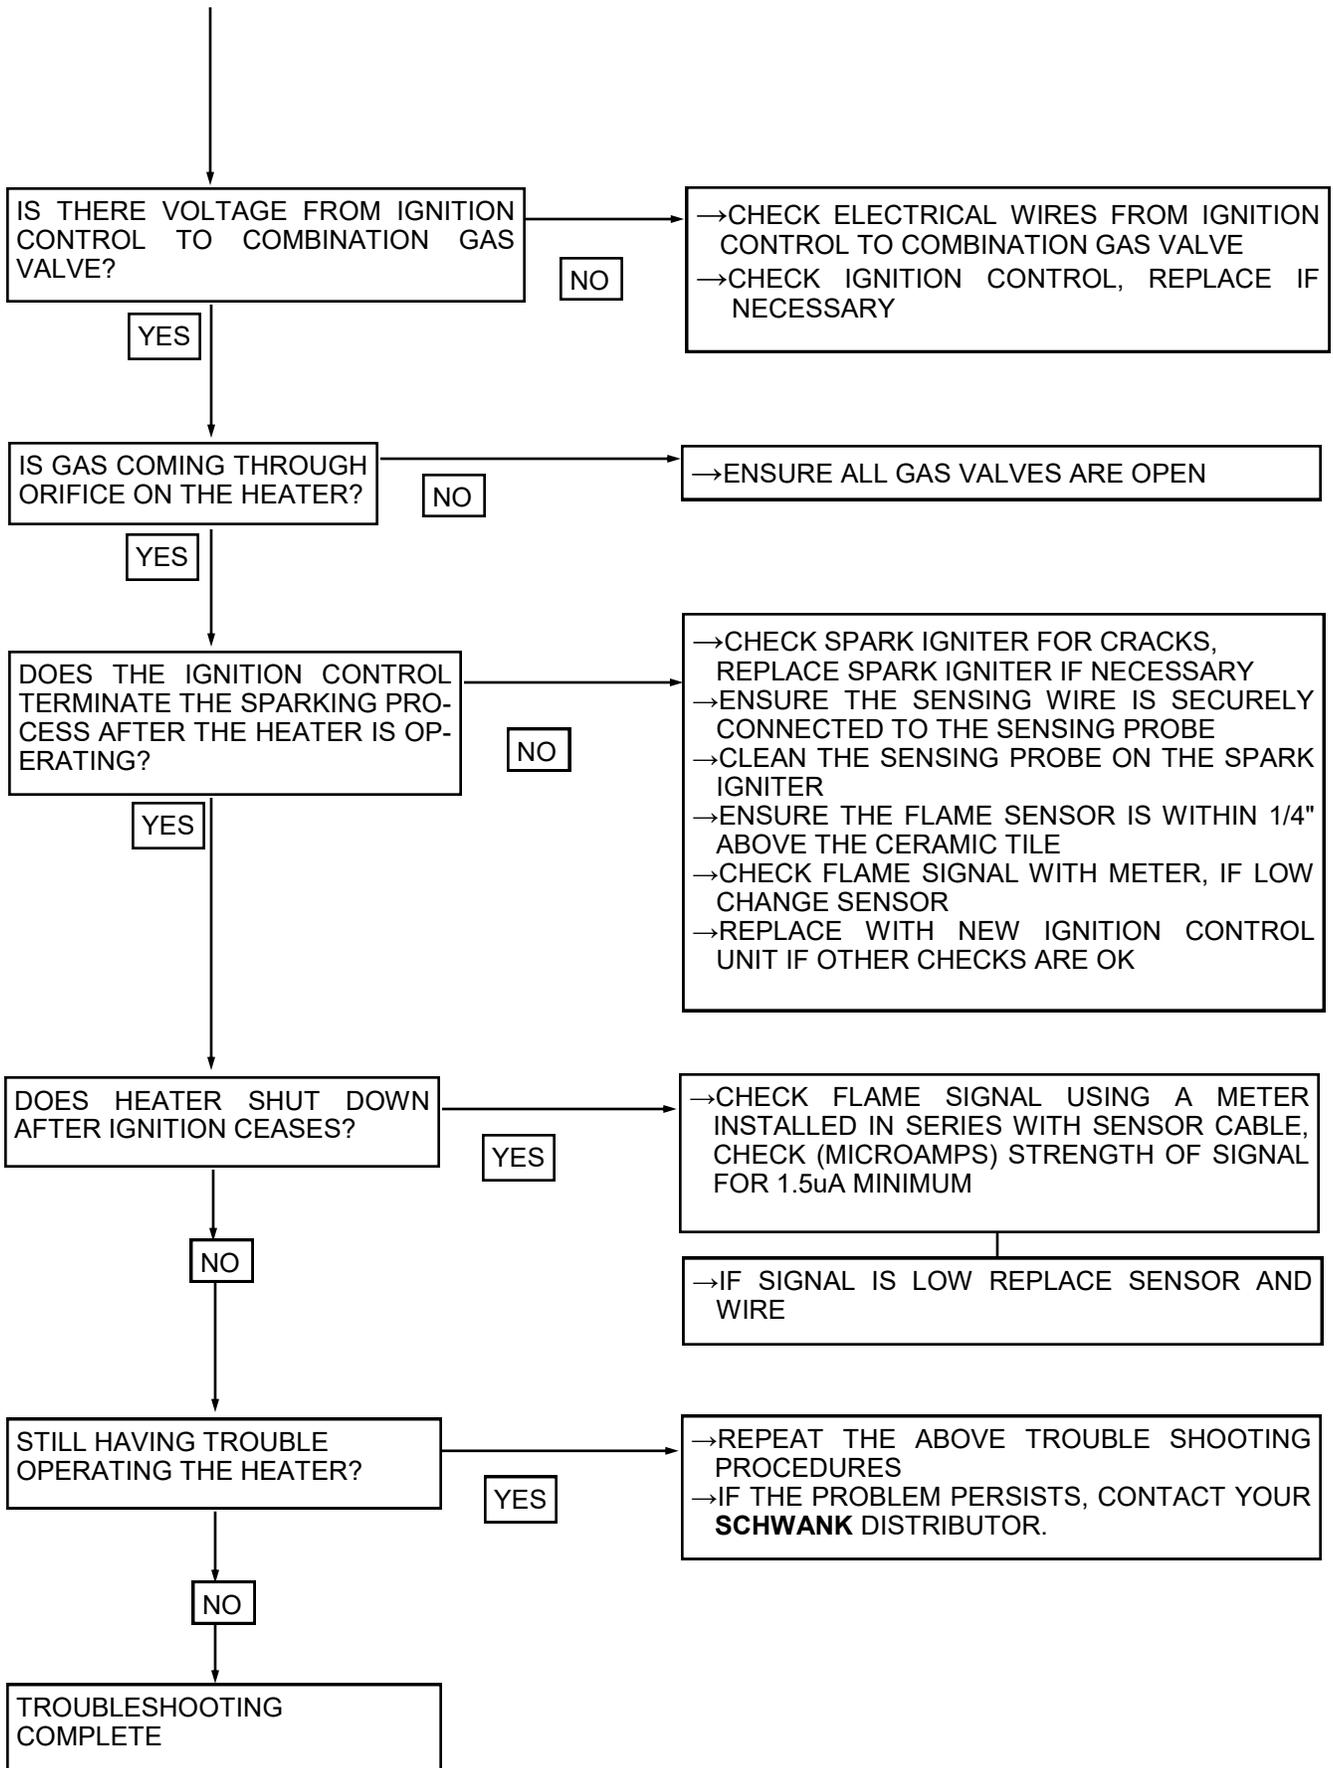

19. HIGH ALTITUDE INSTALLATION

***This heater not to be installed at altitude above:
NG = 6,800 feet; LPG = 4,500 feet***

Canada: The factory installed orifice for this appliance is approved for altitudes zero to 4500 feet above sea level. To install above 4500 feet **refer to local authority having jurisdiction.**

USA: The factory installed orifice for this appliance is approved for altitudes zero to 2000 feet above sea level. When installed above 2000 feet, **refer to information below.**

When this appliance is installed above the standard altitude stipulated for the USA, the input must be de-rated by 4% for each 1000 ft above sea level. The orifice must be changed according to the chart below - ensure you search the correct model. Check with your local utility regarding the gas supply and the de-rating of this appliance.

MODEL	FOR USE AT ALTITUDES ABOVE (FEET) Gas Orifice Drill Size / Part#						DO NOT INSTALL AT ALTITUDE ABOVE 6,800 FEET
	Supplied	USA Only					
	0	2000	3000	4000	5000	6000	
primoSchwank 10 NG	2.65 mm JO-0310-NG	2.60 mm JO-1260-MM	2.57 mm JO-1257-MM	2.53 mm JO-1253-MM	2.49 mm JO-1249-MM	2.45 mm JO-1245-MM	
primoSchwank 10 LPG	1.67 mm JO-0310-LP	1.64 mm JO-1164-MM	1.62 mm JO-1162-MM	1.60 mm JO-1160-MM	DO NOT INSTALL		
primoSchwank 15 NG	3.20 mm JO-0313-NG	3.14 mm JO-1314-MM	3.10 mm JO-1310-MM	3.06 mm JO-1306-MM	3.01 mm JO-1301-MM	2.96 mm JO-1296-MM	
primoSchwank 15 LPG	2.10 mm JO-0313-LP	2.06 mm JO-1206-MM	2.04 mm JO-1204-MM	2.01 mm JO-1201-MM	DO NOT INSTALL		
primoSchwank 20 NG	3.75 mm JO-0311-NG	3.68 mm JO-1368-MM	3.64 mm JO-1364-MM	3.59 mm JO-1359-MM	3.53 mm JO-1353-MM	3.48 mm JO-1348-MM	
primoSchwank 20 LPG	2.43 mm JO-0311-LP	2.39 mm JO-1239-MM	2.36 mm JO-1236-MM	2.32 mm JO-1232-MM	DO NOT INSTALL		
primoSchwank 30 NG	4.55 mm JO-0312-NG	4.47 mm JO-1447-MM	4.41 mm JO-1441-MM	4.35 mm JO-1435-MM	4.29 mm JO-1429-MM	4.22 mm JO-1422-MM	
primoSchwank 30 LPG	2.90 mm JO-0312-LP	2.84 mm JO-1284-MM	2.81 mm JO-1281-MM	2.77 mm JO-1277-MM	DO NOT INSTALL		
supraSchwank 10 NG	2.35 mm JU-0319-NG	2.31 mm JU-1231-MM	2.28 mm JU-1228-MM	2.25 mm JU-1225-MM	2.21 mm JU-1221-MM	2.18 mm JU-1218-MM	
supraSchwank 10 LPG	1.50 mm JU-0319-LP	1.47 mm JU-1147-MM	1.45 mm JU-1145-MM	1.43 mm JU-1143-MM	DO NOT INSTALL		
supraSchwank 15 NG	2.85 mm JU-0318-NG	2.80 mm JU-1280-MM	2.76 mm JU-1276-MM	2.73 mm JU-1273-MM	2.68 mm JU-1268-MM	2.64 mm JU-1264-MM	
supraSchwank 15 LPG	1.85 mm JU-0318-LP	1.82 mm JU-1182-MM	1.79 mm JU-1179-MM	1.77 mm JU-1177-MM	DO NOT INSTALL		
supraSchwank 20 NG	3.35 mm JU-0320-NG	3.29 mm JU-1329-MM	3.25 mm JU-1325-MM	3.20 mm JU-1320-MM	3.16 mm JU-1316-MM	3.10 mm JU-1310-MM	
supraSchwank 20 LPG	2.18 mm JU-0320-LP	2.14 mm JU-1214-MM	2.11 mm JU-1211-MM	2.08 mm JU-1208-MM	DO NOT INSTALL		
supraSchwank 30 NG	4.05 mm JU-0319-NG	3.98 mm JU-1398-MM	3.93 mm JU-1393-MM	3.87 mm JU-1387-MM	3.81 mm JU-1381-MM	3.75 mm JU-1375-MM	
supraSchwank 30 LPG	2.60 mm JU-0319-LP	2.55 mm JU-1255-MM	2.52 mm JU-1252-MM	2.49 mm JU-1249-MM	DO NOT INSTALL		

20. SEQUENCE OF OPERATION FOR FENWAL 35-60 DSI CONTROL

Start up - Heat Mode:

On a call for heat the Fenwal 35-60 control will reset, perform a self check routine, flash the diagnostic LED for up to four seconds. The gas valve and spark are energized commencing the trial for ignition period. When flame is detected during the trial for ignition, spark is shutoff immediately and the gas valve remains energized. The thermostat and main burner flame are constantly monitored to assure the system continues to operate properly. When the thermostat is satisfied and the demand for heat ends, the gas valve is de-energized.

Flame Failure - Multi Trial Model:

Should the main burner fail to light, or the flame is not detected during the first trial for ignition period, the gas valve is de-energized and the control goes through an interpurge delay before another ignition attempt. The control will attempt two additional ignition trials before going into lockout and the valve relay is de-energized.

Recovery from lockout requires a manual reset by either resetting the thermostat or removing 24 volts for a period of 5 seconds. If the thermostat is still calling for heat after one hour the control will automatically reset and attempt to ignite the burner again.


Flame Failure - Re-Ignition:

If the established flame signal is lost while the burner is operating, the control will respond within 0.8 seconds. The HV spark will be energized for a trial ignition period in an attempt to relight the burner.

If the burner does not light the control will make two more attempts to relight the burner before de-energizing the gas valve. If the burner does not relight, the control will go into lockout as noted above in "Failure to light". If flame is re-established, normal operation resumes. Multi-try models will allow three trials for ignition including interpurge delay between trials.

Flame current is the current which passes through the flame from the sensor to ground. The minimum flame current necessary to keep the Fenwal 35-60 system from lockout is 0.7 microamps (μA). To measure the flame current, connect analog DC microammeter to the FC-FC+ terminals.

Meter should read 0.7 μA or higher. If the meter reads below "0" on scale, meter leads are reversed. Disconnect power and reconnect meter leads for proper polarity.

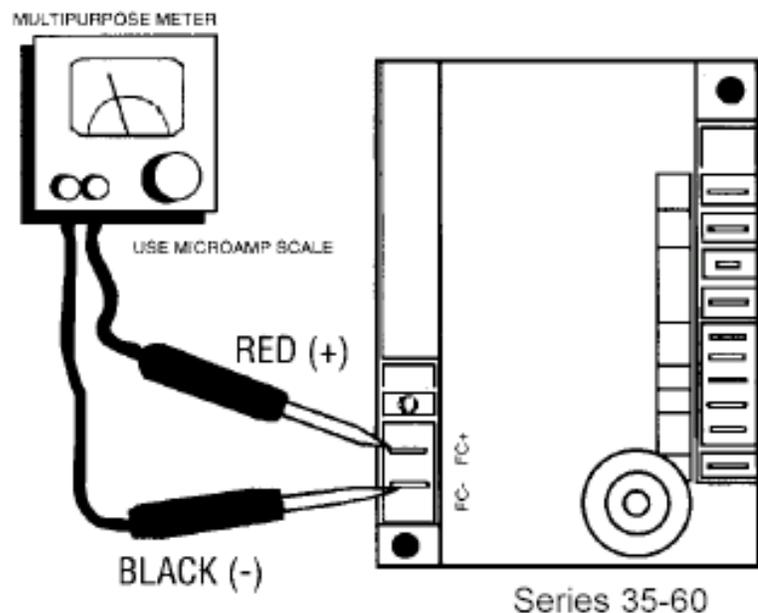

Cautions:

1. Ceramic insulators should not be in or close to the flame.
2. Electrode assemblies should not be adjusted or disassembled. Electrodes should have a gap spacing of 1/8"- 3/16" (3.12± 0.81 mm). If this spacing is not correct, the assembly must be replaced. Electrodes are preset and NOT field adjustable.
3. Exceeding the temperature limits can cause nuisance lockouts and premature electrode failure.

The control must be secured in an area that will experience a minimum of vibration and remain below the maximum operating temperature of 160°F.

21. SPARK IGNITION CIRCUIT

The step-up transformer in the ignition control provides spark ignition at 30,000 volts (open circuit). To check the spark ignition circuit, proceed as follows.

- 1 Shut off gas supply to the gas control
- 2 Disconnect the ignition cable at the ignition control stud terminal to isolate the circuit from the spark igniter or igniter/sensor
- 3 Prepare a short jumper lead, using heavily insulated wire such as ignition cable

CAUTION



In the next step, DO NOT allow fingers to touch either the stripped end of the jumper or the stud terminal. This is a very high voltage circuit and electrical shock can result.

- 1 Perform this test immediately upon energizing the system before the ignition control goes into safety lockout and interrupts the spark circuit. Touch one end of the jumper firmly to the ignition control GND terminal. (DO NOT remove the existing ground lead.) Slowly move the other end of the jumper wire toward the stud terminal on the ignition control to establish a spark.
- 2 Pull the wire away from the stud and note the length of gap at which spark discontinues.
- 3 A spark length of 1/8 in. (3mm) or more indicates satisfactory voltage output. If no arc can be established, or the maximum spark is less than 1/8 in. (3mm), and power to the ignition control input terminals was proved, replace the ignition control.

22. COMMISSIONING REPORT

THIS APPLIANCE HAS BEEN FACTORY TESTED PRIOR TO SHIPMENT.
HOWEVER, IT IS NOT A "PLUG-IN" APPLIANCE AND REQUIRES FIELD ADJUSTMENT
AND COMMISSIONING TO ENSURE SAFE AND EFFICIENT OPERATION.

**A QUALIFIED GAS SERVICE TECHNICIAN MUST COMMISSION THE APPLIANCE AND
COMPLETE THE COMMISSIONING REPORT.**

**CONFIRM THAT THE APPLIANCE IS INSTALLED ACCORDING TO ALL LOCAL AND NA-
TIONAL CODES AND THE INSTRUCTIONS IN THIS MANUAL.**

**ENSURE THAT SITE CONDITIONS MEET THE SPECIFICATIONS IN THIS MANUAL RE-
GARDING:**

- **SUSPENSION**
- **CLEARANCES TO COMBUSTIBLE MATERIAL**
- **VENTING AND AIR SUPPLY**
- **ELECTRICAL SUPPLY, WIRING, AND CONNECTION**
- **GAS CONNECTION, SUPPLY AND MANIFOLD PRESSURE**

**THIS COMMISSIONING REPORT MUST BE SUBMITTED TO OUR TECHNICAL SER-
VICES DEPARTMENT PRIOR TO ANY CALL FOR TECHNICAL ASSISTANCE.**

FAX THE COMPLETED REPORT TO 1-866-361-0523

Call Technical Services: 1-877-446-3727

INSTALLING CONTRACTOR:

COMMISSIONING TECHNICIAN:

ADDRESS:

CITY:

STATE/PROV:

PHONE:

CELL:

DATE INSTALLED:

PROJECT NAME:

PROJECT CITY:

HEATER MODEL #:

HEATER SERIAL #:

**TO BE COMPLETED BY THE LICENSED INSTALLER:
LUMINOUS HEATER COMMISSIONING REPORT**

TYPE OF GAS:	NG	<input type="checkbox"/>	<input type="checkbox"/>
DOES BUILDING HAVE A NEGATIVE CONDITION:	YES	<input type="checkbox"/>	<input type="checkbox"/>
WILL HEATER BE EXPOSED TO WELDING FUMES:	YES	<input type="checkbox"/>	<input type="checkbox"/>
IS HEATER EXPOSED TO CHEMICAL OR CORROSIVE ATMOSPHERE:	YES	<input type="checkbox"/>	<input type="checkbox"/>
IS AN OPEN FLAME COMPATIBLE WITH THE INSTALLED LOCATION:	YES	<input type="checkbox"/>	<input type="checkbox"/>
MINIMUM CLEARANCES CONFORM AS PER I&O MANUAL:	YES	<input type="checkbox"/>	<input type="checkbox"/>
IF THIS IS A HIGH ALTITUDE AREA WHAT IS THE ALTITUDE ABOVE SEA LEVEL		<input type="text"/>	Feet
IS HEATER SHORT AXIS HORIZONTAL WITH THE VENTURI ON TOP:	YES	<input type="checkbox"/>	<input type="checkbox"/>
IS HEATER INTERLOCKED WITH AN EXHAUST FAN SYSTEM:	YES	<input type="checkbox"/>	<input type="checkbox"/>
IS FAN SYSTEM 3 CFM PER 1000Btu/hr OF THE TOTAL HEAT LOAD:	YES	<input type="checkbox"/>	<input type="checkbox"/>
WILL HEATER BE AFFECTED BY OVERHEAD CRANES / VIBRATION:	YES	<input type="checkbox"/>	<input type="checkbox"/>
IS GAS SUPPLY LINE ADEQUATELY SIZED FOR SYSTEM VOLUME:	YES	<input type="checkbox"/>	<input type="checkbox"/>
HAVE GAS LINES AND BRANCHES BEEN PURGED OF AIR:	YES	<input type="checkbox"/>	<input type="checkbox"/>
THIS HEATER WAS FIELD TEST FIRED WITHOUT ANY MALFUNCTION:	YES	<input type="checkbox"/>	<input type="checkbox"/>
INLET GAS SUPPLY PRESSURE WITH HEATER OPERATING:		<input type="text"/>	WC"
GAS VALVE OUTLET (Manifold) PRESSURE WITH HEATER OPERATING:		<input type="text"/>	WC"
HAS THE WIRING POLARITY BEEN MAINTAINED THROUGHOUT:	YES	<input type="checkbox"/>	<input type="checkbox"/>
WHAT IS THE VOLTAGE READING AT THE IGNITION MODULE:		<input type="text"/>	VOLTS
WHAT IS THE FLAME SIGNAL STRENGTH IN uA FROM SENSOR:		<input type="text"/>	uA (microamps)
IS THE HEATER CONTROLLED BY A THERMOSTAT:	YES	<input type="checkbox"/>	<input type="checkbox"/>
IS THE THERMOSTAT STRATEGICALLY LOCATED:	YES	<input type="checkbox"/>	<input type="checkbox"/>
TOTAL HEATERS SUPPLIED FROM ONE SINGLE TRANSFORMER:		<input type="text"/>	TOTAL
WHAT IS THE RATING OF THE TRANSFORMER IN VA:		<input type="text"/>	V.A.
WHAT IS THE TOTAL LENGTH OF THE LOW VOLTAGE WIRING:		<input type="text"/>	FEET
WHAT IS THE GAUGE OF THE LOW VOLTAGE WIRING:		<input type="text"/>	GAUGE

THIS HEATER MUST HAVE GOOD ELECTRICAL GROUNDING:

*** FAX COMPLETED FORM TO TECHNICAL SERVICES: 1-866-361-0523**

23. OPTIONAL ACCESSORIES

Line Voltage Thermostat



PART #

JL-0772-XX

TruTemp Thermostat

- Senses and averages ambient and radiant temperatures for true comfort control of IR systems
- Automatic unoccupied setback of 9°F (5°C) - can be overridden



JM-0150-XX

FOR SECURITY TO PREVENT UNAUTHORIZED OPENING:

- 2 - Stainless Steel Tamper Proof Screws for TruTemp Thermostat, including 1 Tool. (only one Tool is necessary for most projects)
- 2 - Stainless Steel Tamper Proof Screws for TruTemp Thermostat. (2 for each additional Thermostat on project)

JM-0180-XX

JM-0180-AA

Low Voltage Digital Thermostat (24 Volts)



JS-0569-WR

Flexible Gas connector 1/2" x 24"



JL-0771-XX

Pressure Equalizer Venturi Cover

- For drafty locations (near overhead doors, etc)



JO-0368-XX

Control Center / Transformer Relay




JM-0300-XX

AT72D-40VA Transformer for single heater




JL-0776-XX

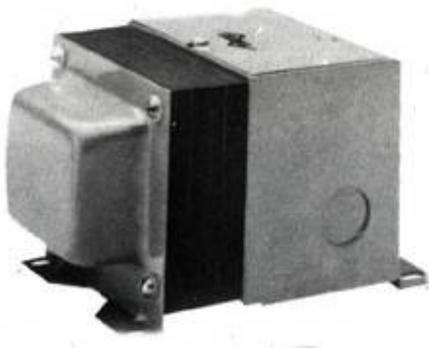


<u>Transformer Size</u>	<u>Heaters Serviced</u>	
100 VA Transformer	up to 4	JL-0778-XX
150VA Transformer	up to 6	JL-0779-XX
200 VA Transformer	up to 9	JL-0780-XX
250 va transformer	up to 11	JL-0781-XX
350 VA Transformer	up to 16	JL-0781-AA
500 VA Transformer		JL-0781-BB

primoSchwank Reflector Extension Installation Instructions


REFLECTOR EXTENSION - VENTURI SIDE

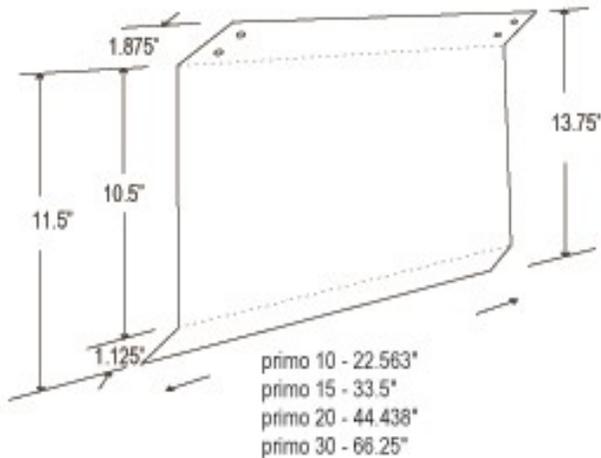


REFLECTOR EXTENSION - SINGLE WALL SIDE

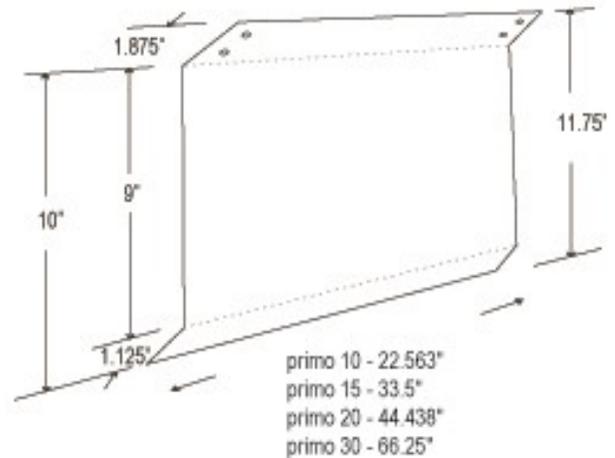

SIDE VIEW

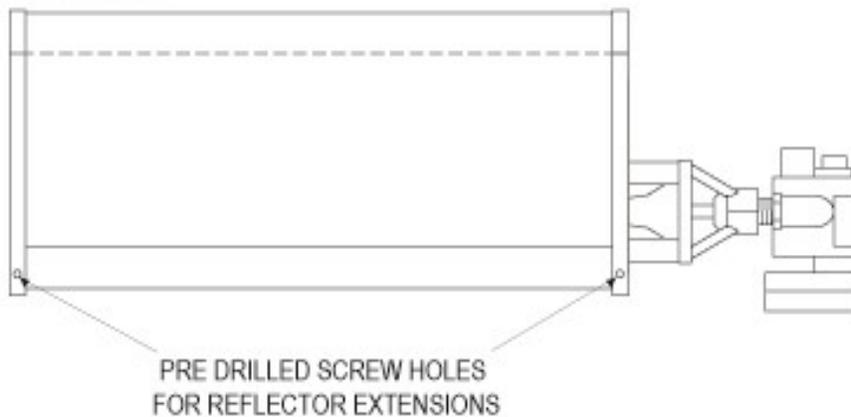


END VIEW

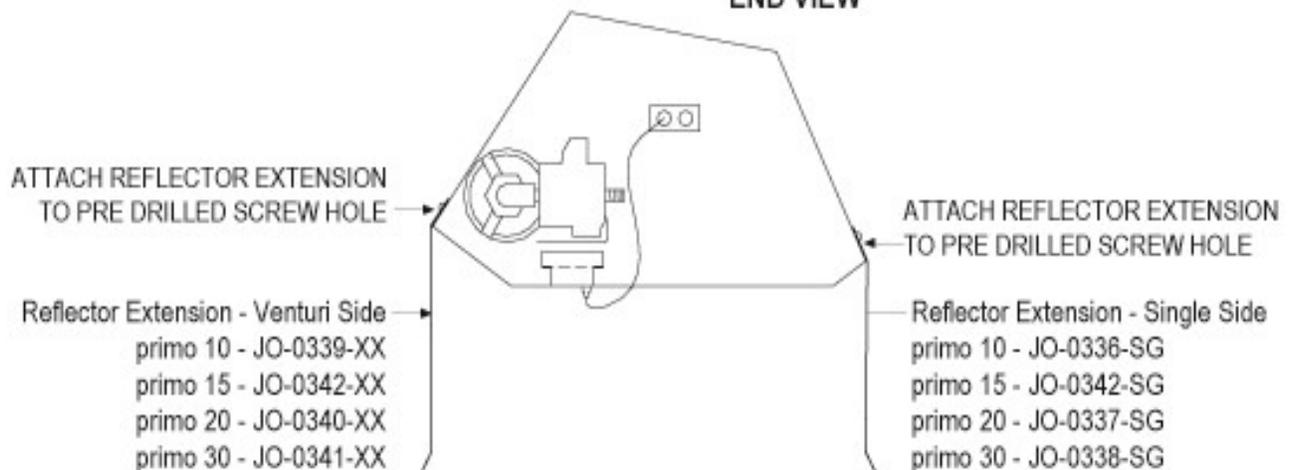


supraSchwank Reflector Extension Installation Instructions


REFLECTOR EXTENSION - VENTURI SIDE

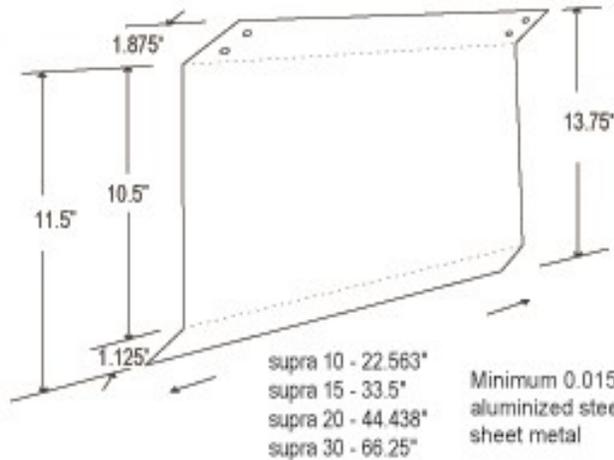

REFLECTOR EXTENSION - SINGLE WALL SIDE

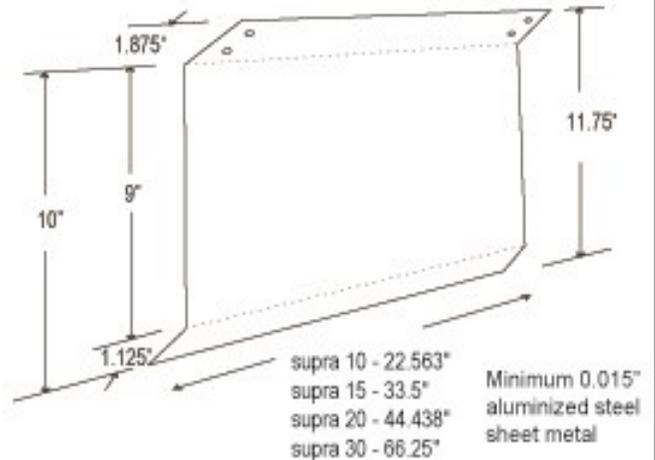


SIDE VIEW

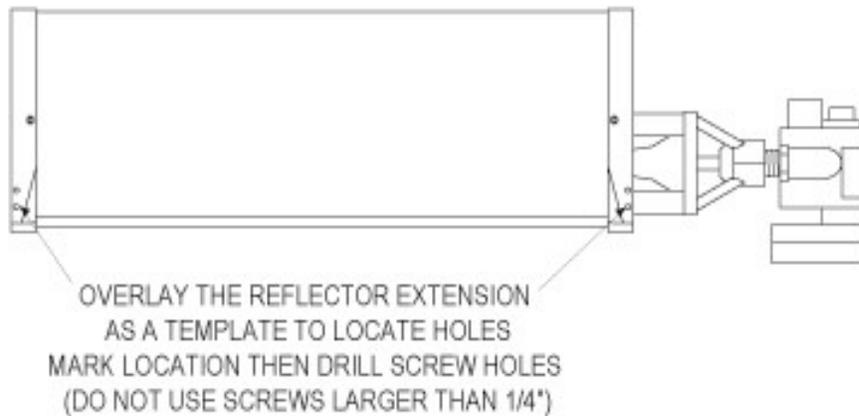

END VIEW

ATTACH REFLECTOR EXTENSION TO DRILLED SCREW HOLES


Reflector Extension - Venturi Side
 supra 10 - JU-0339-XX
 supra 15 - JU-0342-XX
 supra 20 - JU-0340-XX
 supra 30 - JU-0341-XX

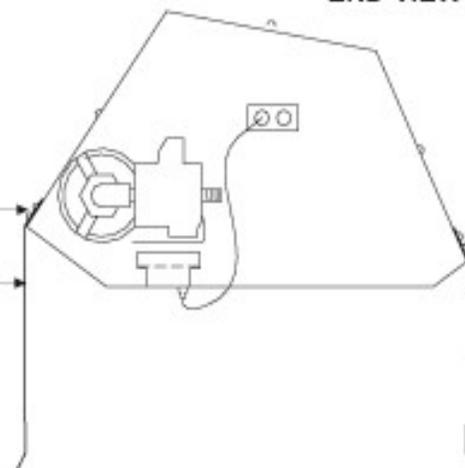

ATTACH REFLECTOR EXTENSION TO DRILLED SCREW HOLES

Reflector Extension - Single Wall Side
 supra 10 - JU-0336-SG
 supra 15 - JU-0342-SG
 supra 20 - JU-0337-SG
 supra 30 - JU-0338-SG

24. PARTS LIST

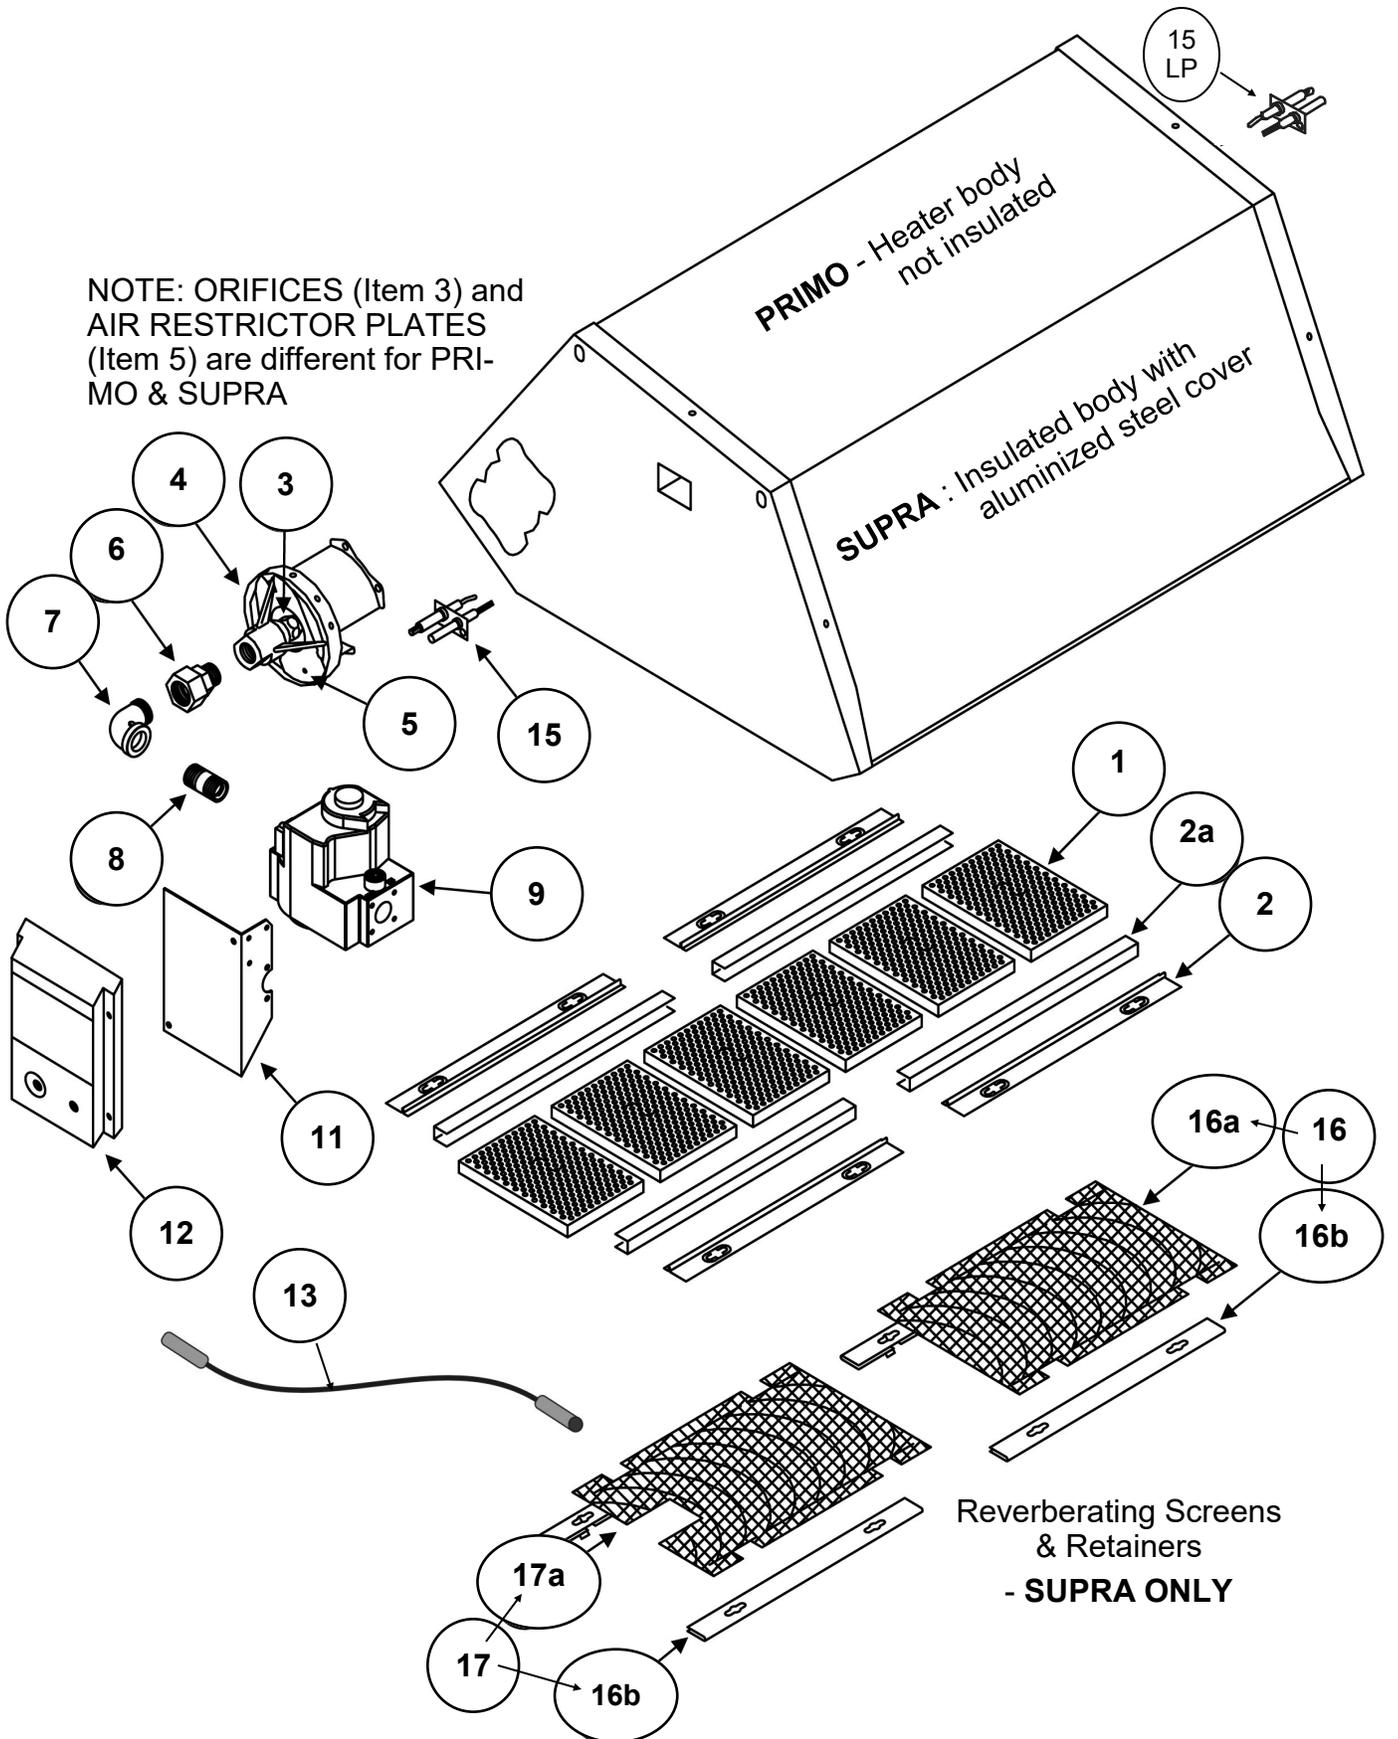


24. PARTS LIST

ITEM	PART NUMBER	PART DESCRIPTION	MODEL
1	JO-0370-XX	CERAMIC TILE	
2	JO-0343-XX	TILE RETAINER STRIP (2 PER 3 TILES)	
2a	JO-0344-XX	TILE HOLDER (2 PER 3 TILES)	
3	PRIMO - MAIN BURNER ORIFICE		
	JO-0310-LP	PRIMO 10 LP	PRIMO ONLY
	JO-0310-NG	PRIMO 10 NG	PRIMO ONLY
	JO-0313-LP	PRIMO 15 LP	PRIMO ONLY
	JO-0313-NG	PRIMO 15 NG	PRIMO ONLY
	JO-0311-LP	PRIMO 20 LP	PRIMO ONLY
	JO-0311-NG	PRIMO 20 NG	PRIMO ONLY
	JO-0312-LP	PRIMO 30 LP	PRIMO ONLY
	JO-0312-NG	PRIMO 30 NG	PRIMO ONLY
3	SUPRA - MAIN BURNER ORIFICE		
	JU-0319-LP	SUPRA 10 LP - 1.50mm	SUPRA ONLY
	JU-0319-NG	SUPRA 10 NG - 2.35mm	SUPRA ONLY
	JU-0318-LP	SUPRA 15 LP - 1.85mm	SUPRA ONLY
	JU-0318-NG	SUPRA 15 NG - 2.85mm	SUPRA ONLY
	JU-0320-LP	SUPRA 20 LP - 2.18mm	SUPRA ONLY
	JU-0320-NG	SUPRA 20 NG - 3.35mm	SUPRA ONLY
	JU-0321-LP	SUPRA 30 LP - 2.60mm	SUPRA ONLY
	JU-0321-NG	SUPRA 30 NG - 4.05mm	SUPRA ONLY
4	ORIFICE HOLDER		
	JO-0307-XX	PRIMO / SUPRA 10	
	JO-0307-AA	PRIMO / SUPRA 15	
	JO-0308-XX	PRIMO / SUPRA 20	
	JO-0309-XX	PRIMO / SUPRA 30	
5	PRIMO - VENTURI AERATION RESTRICTOR PLATE		
	JO-0375-XX	MODEL PRIMO 10 (LP) (L.A.) # 45	PRIMO ONLY
	JO-0375-XX	MODEL PRIMO 15 (LP) (L.A.) # 45	PRIMO ONLY
	JO-0376-XX	MODEL PRIMO 15 (NG) (L.A.) # 48	PRIMO ONLY
	JO-0377-XX	MODEL PRIMO 20 (LP) (L.A.) 55 X 73	PRIMO ONLY
5	SUPRA - VENTURI AERATION RESTRICTOR PLATE		
	JO-0373-XX	MODEL SUPRA 10 (LP) # 37	SUPRA ONLY
	JO-0373-XX	MODEL SUPRA 10 (NG) # 40	SUPRA ONLY
	JO-0373-XX	MODEL SUPRA 15 (LP) # 40	SUPRA ONLY
	JO-0377-XX	MODEL SUPRA 20 (LP) # 55	SUPRA ONLY
	JO-0377-XX	MODEL SUPRA 30 (NG) # 55	SUPRA ONLY
6	JO-0315-XX	½" X ½" UNION	
7	JS-0588-XX	½" X 90 DEGREE ELBOW	
8	JO-0316-XX	½" NIPPLE	
9	COMBINATION GAS VALVE		
	JL-0701-XX	HONEWELL VR8205A2065B - 5"W.C. NG	
	JL-0703-XX	HONEWELL VR8205A2016B - 11"W.C. LP	

24. PARTS LIST - continued

ITEM	PART NUMBER	PART DESCRIPTION
10	GASKET SET (NOT SHOWN)	
	JO-0345-XX	PRIMO / SUPRA 10 - STAINLESS STEEL GASKET SET
	JO-0348-XX	PRIMO / SUPRA 15 - STAINLESS STEEL GASKET SET
	JO-0346-XX	PRIMO / SUPRA 20 - STAINLESS STEEL GASKET SET
	JO-0347-XX	PRIMO / SUPRA 30 - STAINLESS STEEL GASKET SET
11	JX-0206-XX	CONTROL BRACKET
12	DIRECT SPARK IGNITION CONTROL	
	JP-2573-FW	DSI - FENWAL 3 TRIAL 24VAC - SUPRA-3T 10 to 30 - Serial #: SU3Txxxxxx
	JX-0202-XX	HONEYWELL S87C CONTROL - SUPRA 10 to 30 - Serial #: SUXXxxxxxx
	JP-2573-FW	FENWAL 35-60 3-TRIAL DSI CONTROL
	JX-0201-DD	FENWAL 2462D901-029 DOUBLE IGNITION CONTROL - supraSchwank 40
	JX-0202-PX	HONEYWELL S87C DS1140 SYNTEK CONTROL REPLACEMENT KIT FOR JX-
13	HIGH VOLTAGE WIRE - SPARK (NOT SHOWN)	
	JO-0323-XX	STANDARD
14	WIRES WITH TERMINALS (NOT SHOWN)	
	JX-0229-VA	LOW VOLTAGE WIRE - VALVE
	JX-0229-GR	LOW VOLTAGE WIRE - GROUND
15	JO-0305-XX	IGNITER SENSOR
SUPRA ONLY - SCREENS AND RETAINERS		
16	JU-0363-KX	SCREEN KIT WITH TWO RETAINERS
16a	JU-0363-XX	REVERBERATING SCREEN
16b	JU-0364-XX	SCREEN RETAINER
17	JU-0363-KA	IGNITER END SCREEN KIT WITH TWO RETAINERS
17a	JU-0363-AA	IGNITER END REVERBERATING SCREEN

* PLEASE SEE YOUR CURRENT PRICE LIST



LIMITED WARRANTY CERTIFICATE

GAS-FIRED INFRA-RED LUMINOUS SERIES: PRIMOSCHWANK / SUPRASCHWANK

The Manufacturer warrants that this product is free from defects in material or workmanship under normal use and service subject to the terms of this document.

FIVE YEAR WARRANTY

Subject to the conditions and limitations stated herein, during the term of this limited warranty, we will supply any component part (at our option a new or repaired component part) of the heater, as defined below, excluding any labor, which the Manufacturer's examination determines to be defective in workmanship or material for a period of five years (5 years) from the date of installation, unless otherwise specified below. This warranty applies to the heater's original owner, and subsequent transferees and only if the unit is installed and operated in accordance with the printed instructions accompanying the unit and in compliance with all applicable installation, building codes and good trade practices. Warranty is only applicable to Schwank components, other parts are limited to their own Manufacturers' warranty. (1 year)

FIFTEEN YEAR WARRANTY

The Manufacturer warrants the Ceramic Tiles for a period of fifteen years (15 years)

WHAT IS NOT COVERED

This warranty does not cover heating products improperly installed, misused, exposed to or damaged by negligence, accident, corrosive or contaminating atmosphere, water, excessive thermal shock, impact, abrasion, alteration or operation contrary to the owner's manual or if the serial number has been altered, defaced or removed. This warranty shall not apply if the input to the heating product exceeds by more than 2% of the rated input on the rating plate. The Manufacturer shall not be responsible for any expenses, including service, labor, diagnosis, analysis, material or transportation charges incurred during removal or reinstallation of this product, or any of its components or parts. All labor or service charges shall be paid by the owner. The Manufacturer shall not be liable for any default or delay in performance by its warranty caused by any contingency beyond its control, including war, government restrictions, or restraints, strikes, fire, flood, acts of God, or short or reduced supply of raw materials or products.

WARRANTY PROCEDURE

To establish the installation date for any purpose under this Limited Warranty, you must retain the original records that can establish the installation date of your unit. If you do not provide such documents, the start date of the term of this Limited Warranty will be based upon the date of unit manufacture, plus thirty (30) days. Failure to maintain the equipment through regular annual service maintenance by a qualified service technician shall void the warranty.

LIMITATIONS AND EXCLUSIONS

This document contains all warranties made by the Manufacturer and may not be varied, altered or extended by any person. There are no promises, or agreements extending from the Manufacture other than the statements contained herein. THIS WARRANTY IS IN LIEU OF ALL WARRANTIES EXPRESSED OR IMPLIED, TO THE EXTENT AUTHORIZED BY THE LAWS OF THE JURISDICTION, INCLUDING SPECIFICALLY THE WARRANTIES OR MERCHANTABILITY OF FITNESS FOR A PARTICULAR PURPOSE.

It is understood and agreed that the Manufacturer's obligation hereunder is limited to repairing or replacing parts determined to be defective as stated above. In no event shall the Manufacturer be responsible for any alleged personal injuries or other special, incidental or consequential damages. As to property damages, contract, tort or other claim the Manufacturer's responsibility shall not exceed the purchase priced paid for the product.

All replacement parts will be warranted for the unused portion of the warranty coverage period remaining on the applicable unit.

Some Authorities do not allow certain warranty exclusions or limitations on how long a warranty lasts or the exclusions or limitations of incidental or consequential damages. In such cases, the above limitations or exclusions may not apply to you and are not intended to do so where prohibited by law. This warranty gives you specific legal rights. You may also have other rights which vary by each jurisdiction.

SCHWANK 5285 BRADCO BLVD. MISSISSAUGA, ON, L4W 2A6 Ph: 905-7121-4766

SP-DSUA-BX-03B
PRIMO-SUPRA WARRANTY
March 2006
RL: 3B
KH